


Specifications & Drive Belt Routing - 1.8L Turbo (Except Passat)

ENGINE IDENTIFICATION

Information in this article applies to the 1.8L turbo engine for engine codes AWD, AWP, AWW and AWV.


Engine identification can be found on front joint (machined surface) between engine and transmission. See **Fig. 1** or **Fig. 2**. Also engine code is listed on vehicle data plate. Additionally, there is a sticker on timing belt guard with engine code and serial number. See **Fig. 3**.

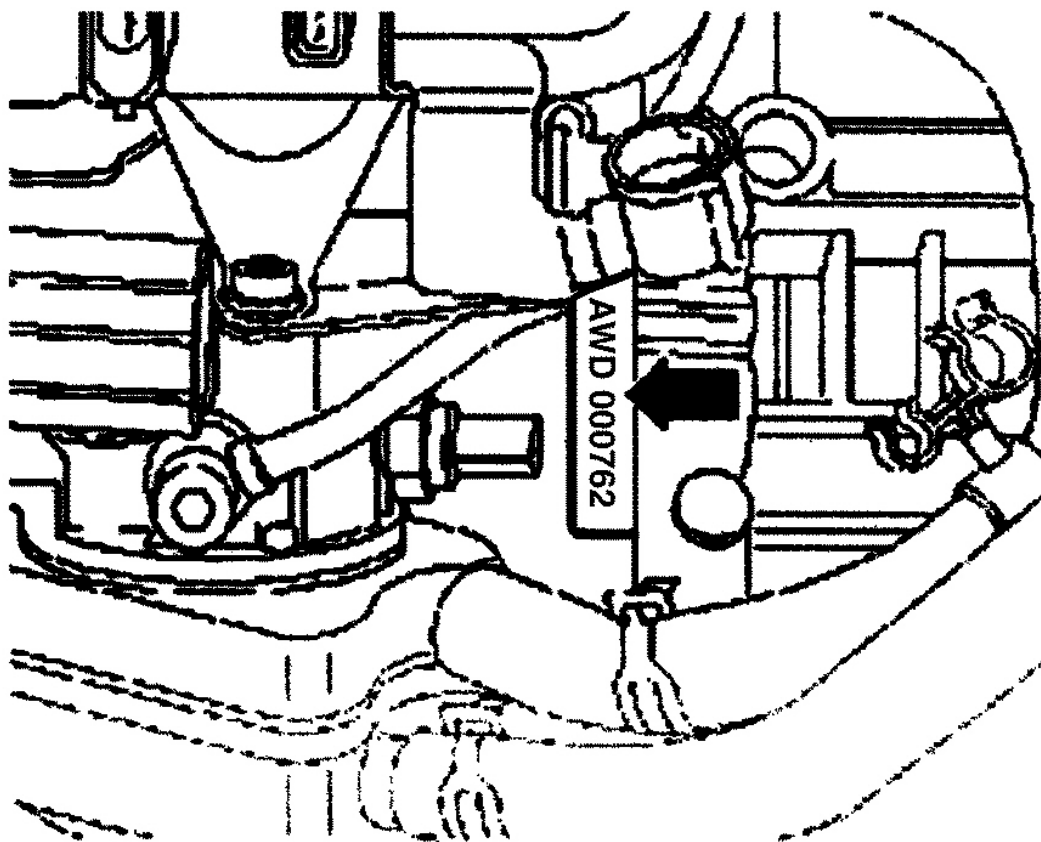

G00304518

Fig. 1: Locating Engine Code On Machined Surface (1.8L Turbo AWD Engine Code Shown; AWP & AWW Similar - Golf, GTI & Jetta)


Courtesy of VOLKSWAGEN UNITED STATES, INC.

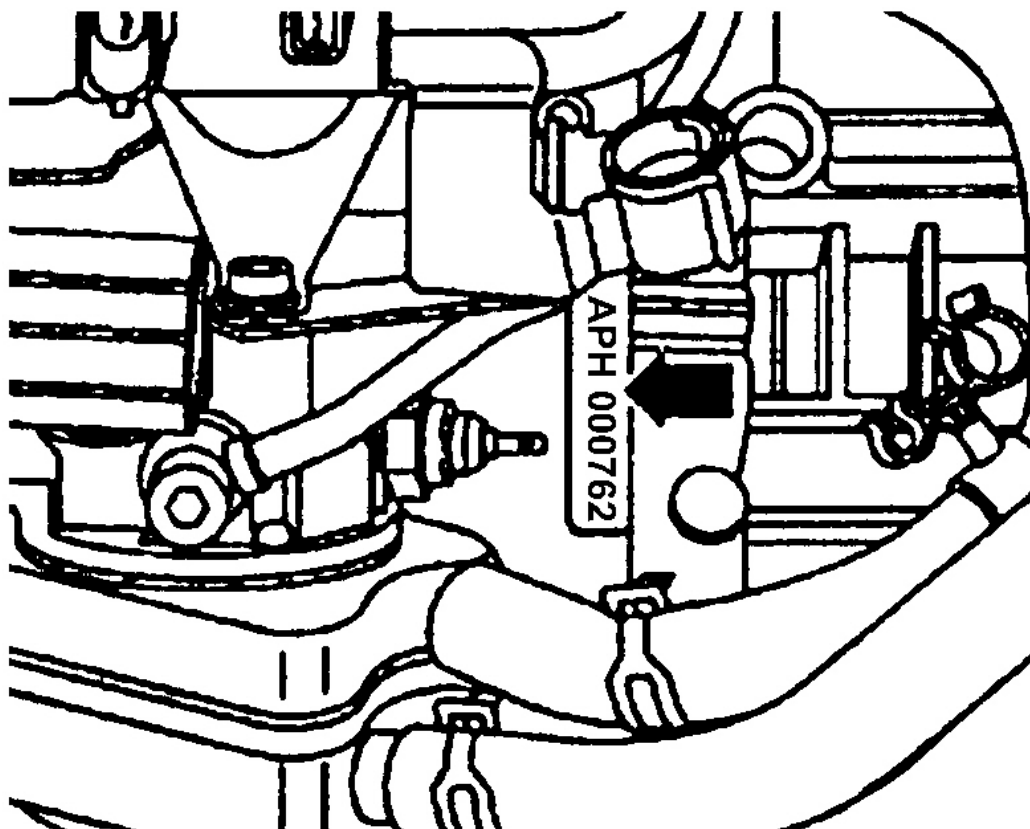

G00115607

Fig. 2: Locating Engine Code On Machined Surface (1.8L Turbo Engine Code APH Shown, AWP & AWV Similar - New Beetle)

Courtesy of VOLKSWAGEN UNITED STATES, INC.

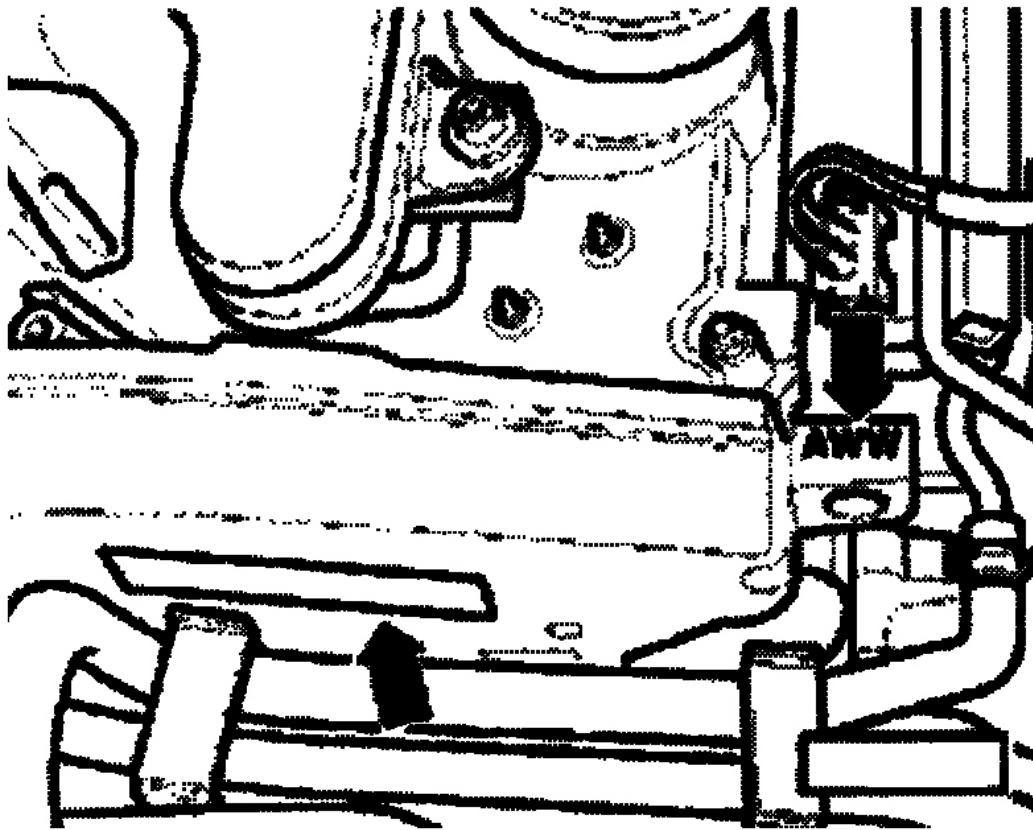

G00304519


Fig. 3: Locating Engine Code On Timing Belt Guard (1.8L Turbo Engine Code AWP & AWW - Golf, GTI & Jetta)

Courtesy of VOLKSWAGEN UNITED STATES, INC.

COMPONENT LOCATIONS

COOLING SYSTEM IDENTIFICATION

NOTE: Three letter code indicates engine identification code. For location of engine code, see ENGINE IDENTIFICATION .

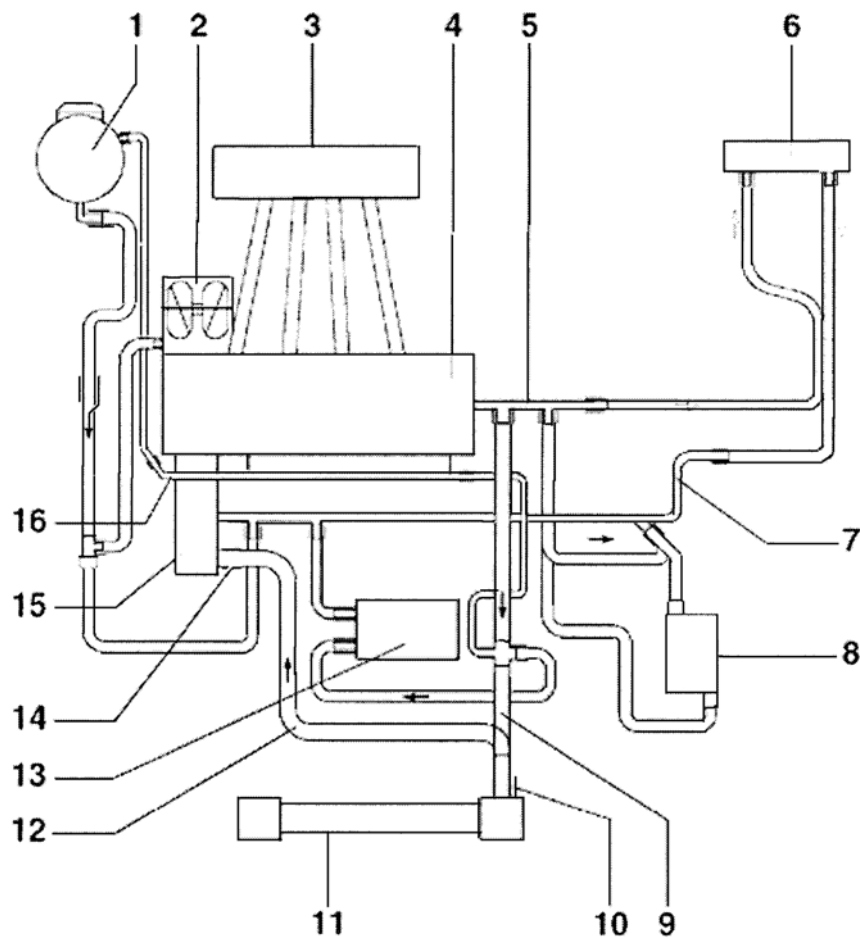


1. Expansion Tank
2. Turbocharger
3. Intake Manifold
4. Cylinder Head/Cylinder Block
5. Connection
6. Heat Exchanger
7. Lower Coolant Pipe
8. Transmission Oil Cooler (Engine Code AWW Only)
9. Upper Radiator Hose
10. Drain Plug
11. Radiator
12. Lower Radiator Hose
13. Oil Cooler
14. Thermostat Housing
15. Water Pump
16. Coolant Pipe

G00304520

Fig. 4: Identifying Cooling System Components & Coolant Flow (1.8L Turbo AWP M/T & AWW M/T & A/T - Golf, GTI & Jetta)

Courtesy of VOLKSWAGEN UNITED STATES, INC.

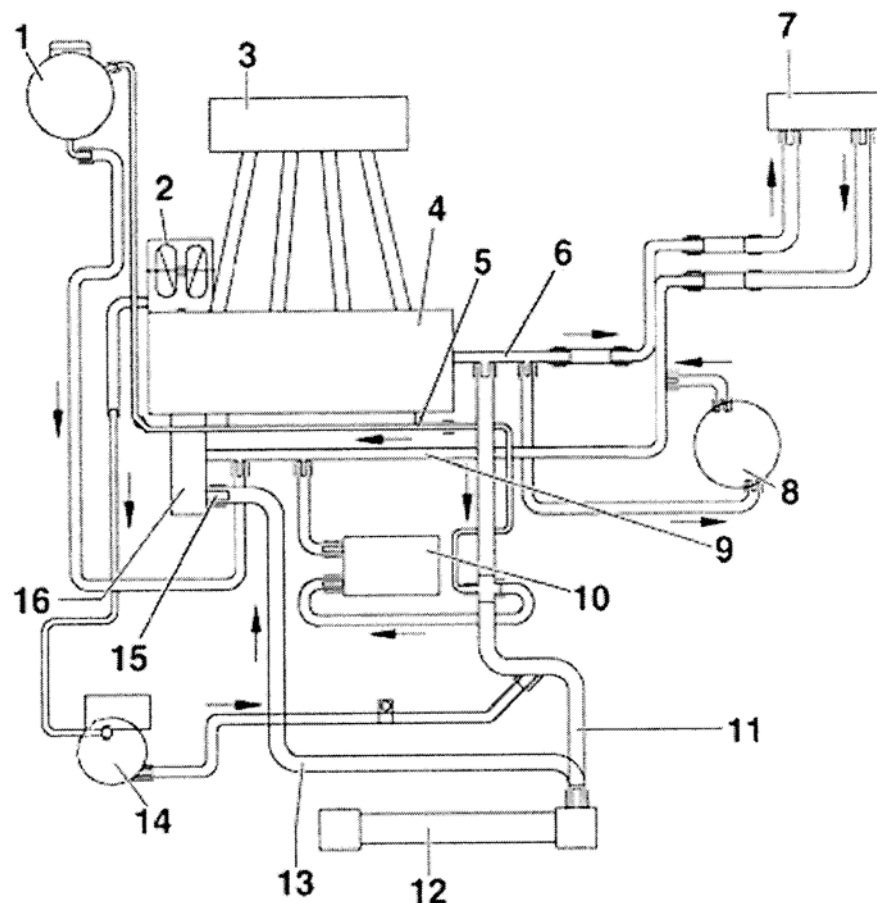


1. Expansion Tank
2. Turbocharger
3. Intake Manifold
4. Cylinder Head/Cylinder Block
5. Coolant Pipe
6. Connection
7. Heat Exchanger
8. Transmission Oil Cooler
9. Lower Coolant Pipe
10. Oil Cooler
11. Upper Radiator Hose
12. Radiator
13. Lower Radiator Hose
14. After-Run Water Pump
15. Thermostat Housing
16. Water Pump

G00304521

Fig. 5: Identifying Cooling System Components & Coolant Flow (1.8L Turbo AWP A/T Only - Golf, GTI & Jetta)

Courtesy of VOLKSWAGEN UNITED STATES, INC.

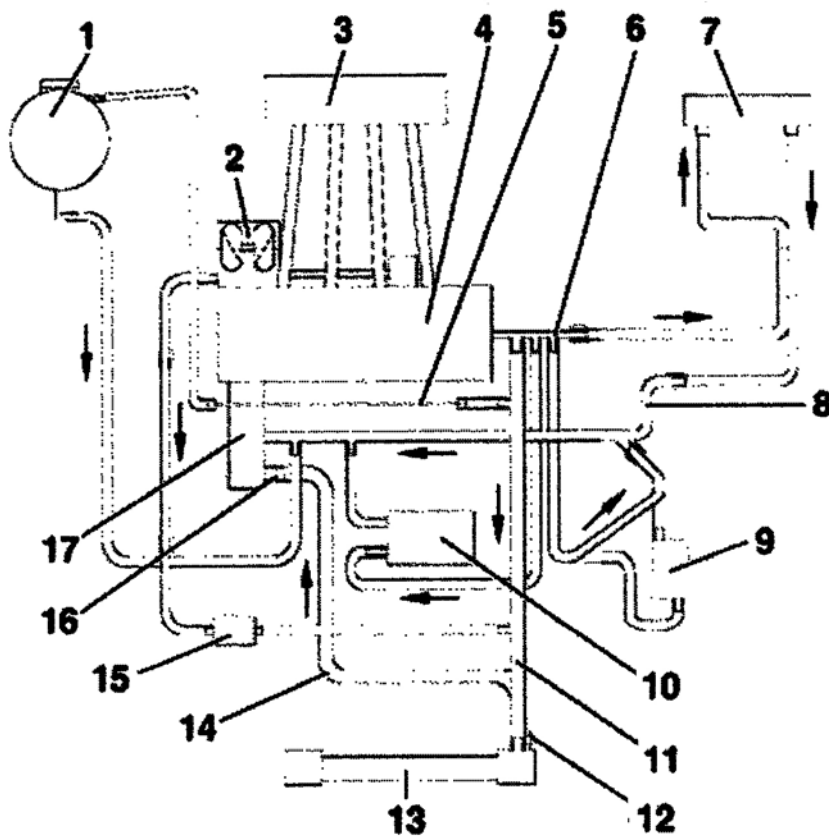

1. Expansion Tank
2. Turbocharger
3. Intake Manifold
4. Cylinder Head/Cylinder Block
5. Upper Coolant Pipe
6. Connection
7. Heat Exchanger
8. Lower Coolant Pipe
9. ATF Cooler (Automatic Transmissions Only)
10. Oil Cooler
11. Upper Radiator Hose
12. Drain Plug
13. Radiator
14. Lower Radiator Hose
15. After-Run Water Pump
16. Thermostat Housing
17. Water Pump

G00304524

Fig. 6: Identifying Cooling System Components & Coolant Flow (1.8L Turbo APH, AWP M/T & AWP - New Beetle)

Courtesy of VOLKSWAGEN UNITED STATES, INC.

DRAINING, FILLING & BLEEDING

COOLING SYSTEM PRECAUTIONS

Use only coolant additive G12 meeting specification VW 774 D. G12 coolant is Red in color. G12 must not be mixed with any other additives. If fluid in expansion tank is Brown, this is an indication that G12 has been mixed with another type of coolant. In this case, coolant must be changed.

G12 coolant additive may be used in older vehicles when original coolant is drained and cooling system is flushed. Contaminated coolant must be drained immediately and cooling system flushed. See **SERVICING** . Also, if radiator, heat exchanger (heater core), cylinder head or cylinder head gasket, have been replaced, flush cooling system and replace engine coolant.

DRAINING, FILLING & BLEEDING COOLING SYSTEM

WARNING: Cooling system is pressurized, when engine is at operating temperature. Use caution and use other appropriate protective gear when servicing cooling system. Slowly and carefully release system pressure, before performing any repairs.


1.8L Turbo

NOTE: See **COOLING SYSTEM PRECAUTIONS** before beginning cooling system servicing.

1. Turn engine off, and allow to cool. Raise and support vehicle. Remove noise insulation panel, below engine. See **Fig. 7** , **Fig. 8** or **Fig. 9** . Open expansion tank cap.
2. Place appropriate drain pan underneath vehicle. Unscrew drain screw on radiator, and drain coolant. See **Fig. 10** . Remove lower coolant hose clamp, and drain coolant from engine. See **Fig. 11** .
3. Turn radiator drain screw closed, and tighten. Push coolant hose onto oil cooler, and tighten hose clamp.


CAUTION: DO NOT mix Green and Red coolant. Mixing these two coolant types will cause severe engine damage. Use ONLY G 012 A8 D Red coolant. See **COOLING SYSTEM SPECIFICATIONS** .

4. Slowly fill expansion tank, to upper marking of shaded area, with recommended coolant mixture. See **Fig. 12** . See **COOLING SYSTEM SPECIFICATIONS** .
5. Install expansion tank cap. Turn off A/C and heat controls. Start engine, and raise engine speed to 2000 RPM for approximately 3 minutes. Allow engine to idle, until coolant fan turns on. Check coolant level, and top off as necessary.
6. When engine is at normal operating temperature, coolant level must be at upper marking of shaded area, on expansion tank. When engine is cold, coolant level should be at approximately middle of shaded area. See **Fig. 12** .

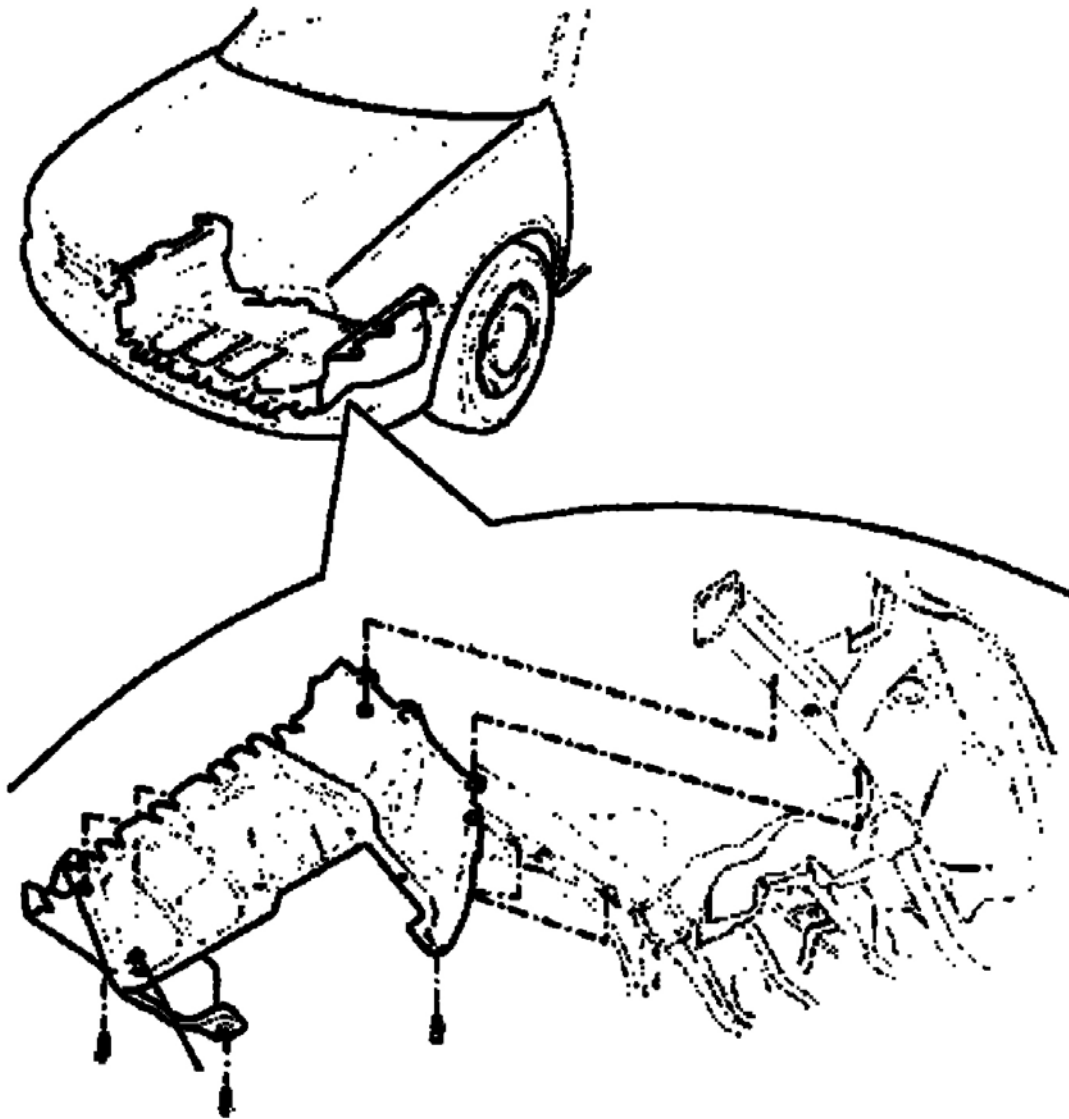


G00314522

Fig. 7: Identifying Noise Insulation Mounting Points (Golf, GTI & Jetta)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

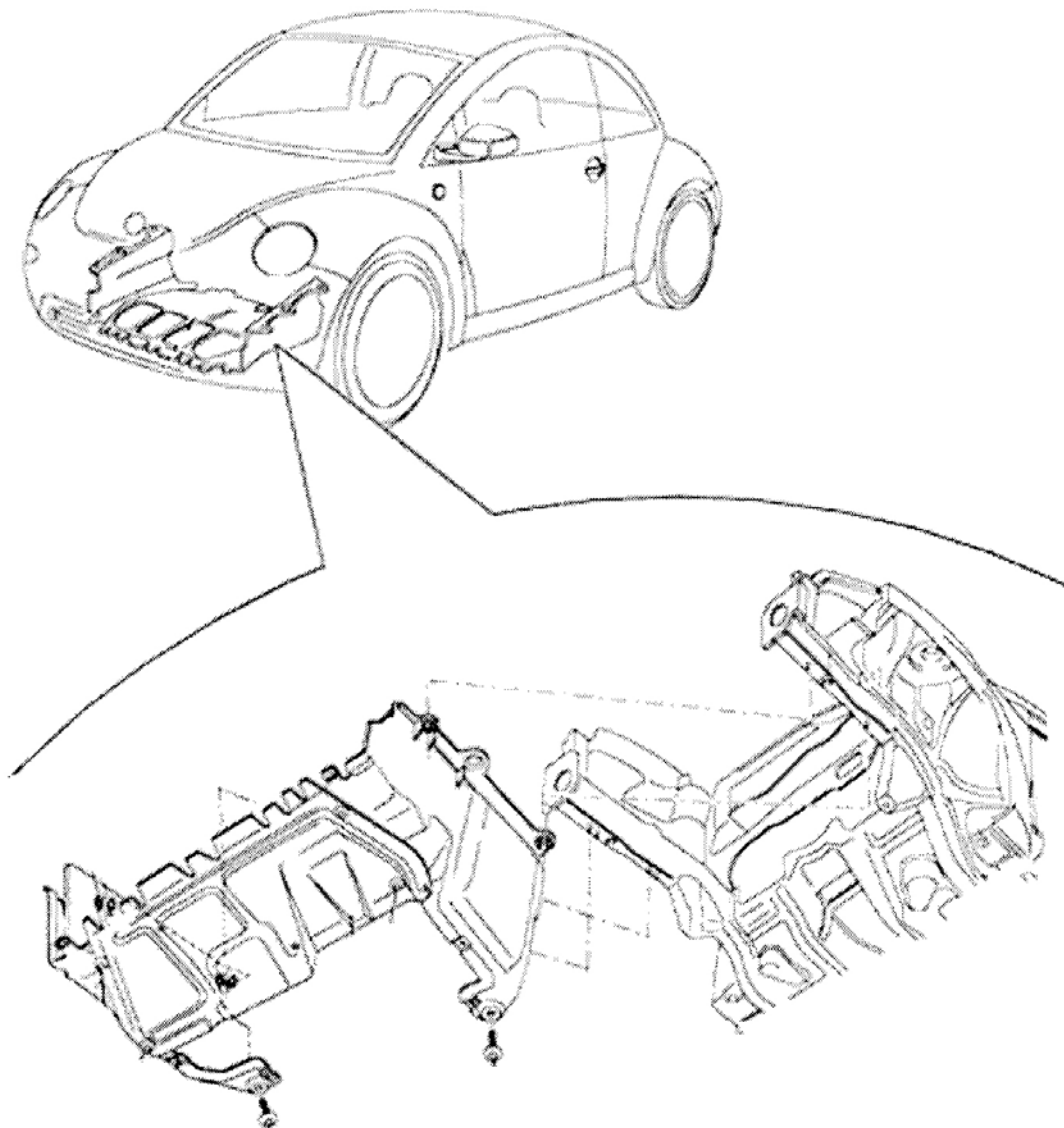


G00304525

Fig. 8: Identifying Noise Insulation Mounting Points (New Beetle)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

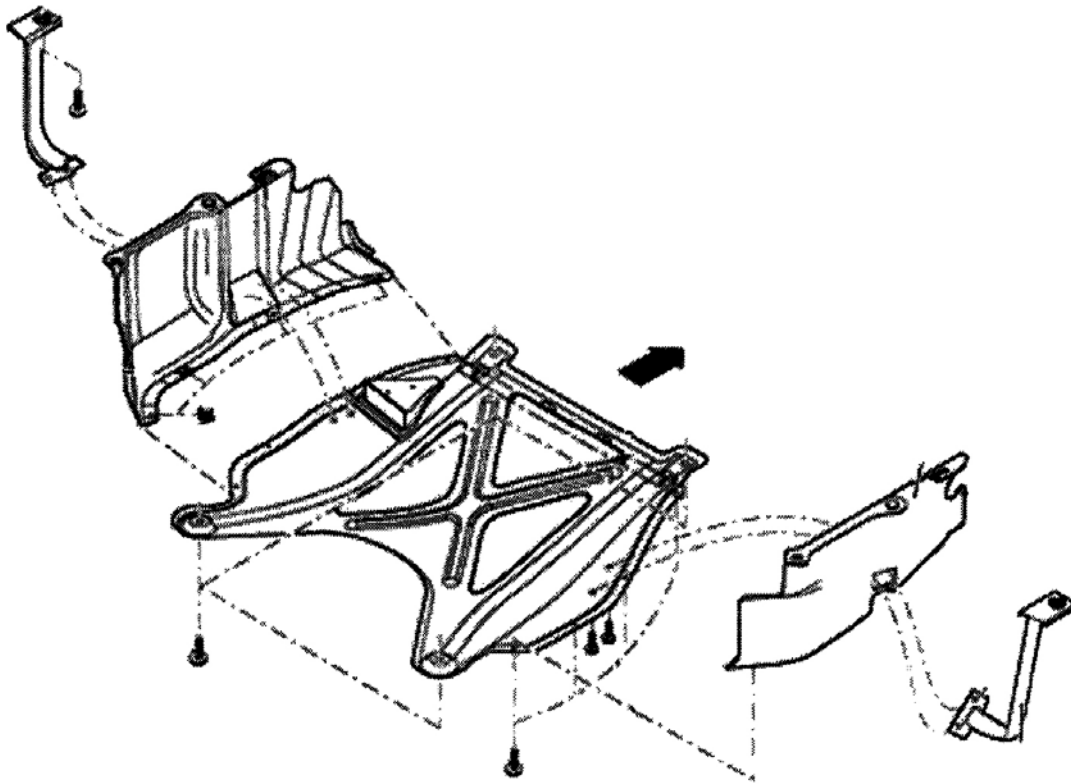


G00304526

Fig. 9: Identifying Noise Insulation Mounting Points (New Beetle Convertible)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

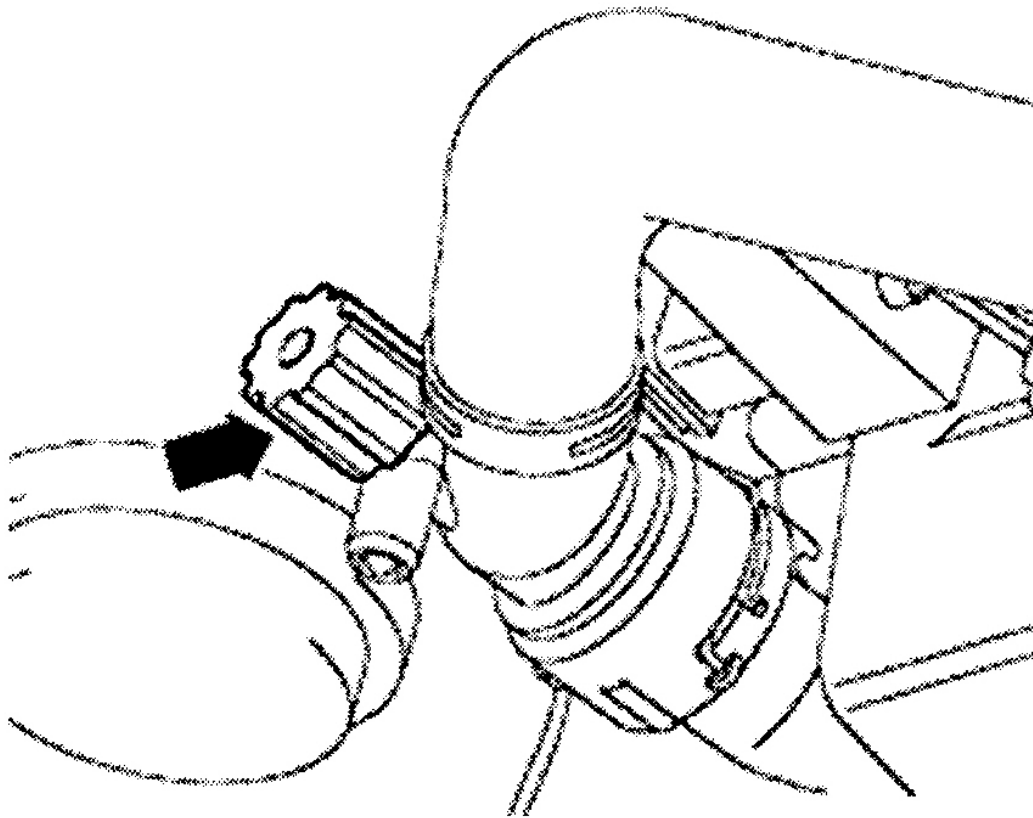


G00304428

Fig. 10: Identifying Drain Screw On Radiator
Courtesy of AUDI OF AMERICA, INC.

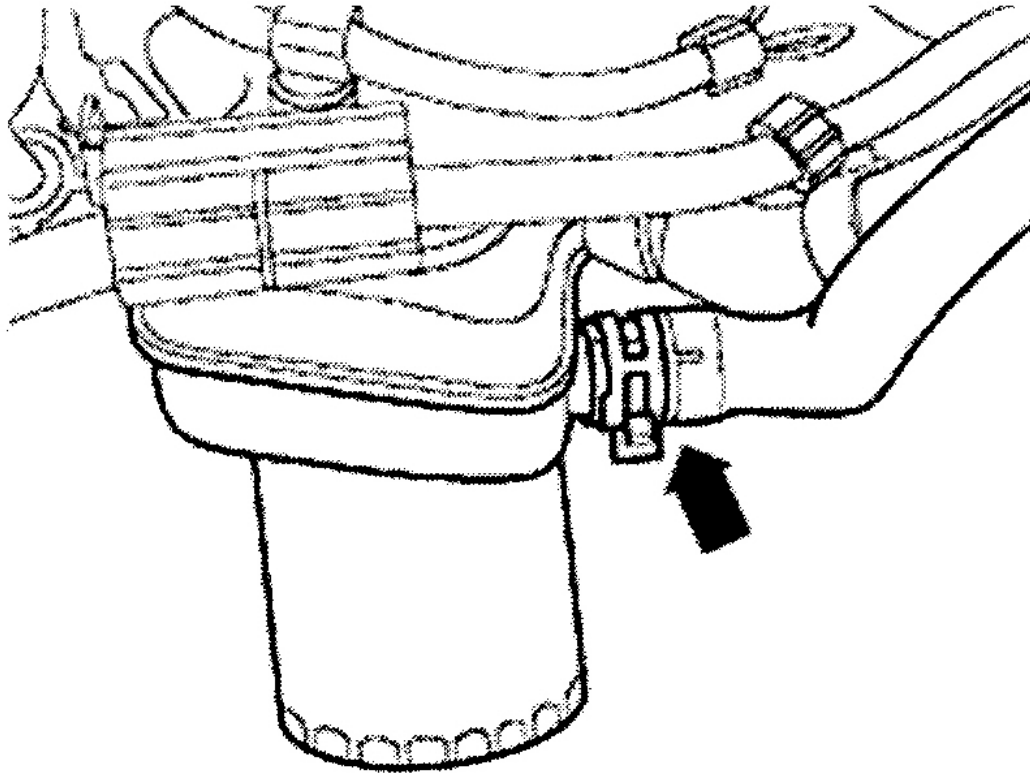

G00304429

Fig. 11: Removing Lower Coolant Hose
Courtesy of AUDI OF AMERICA, INC.

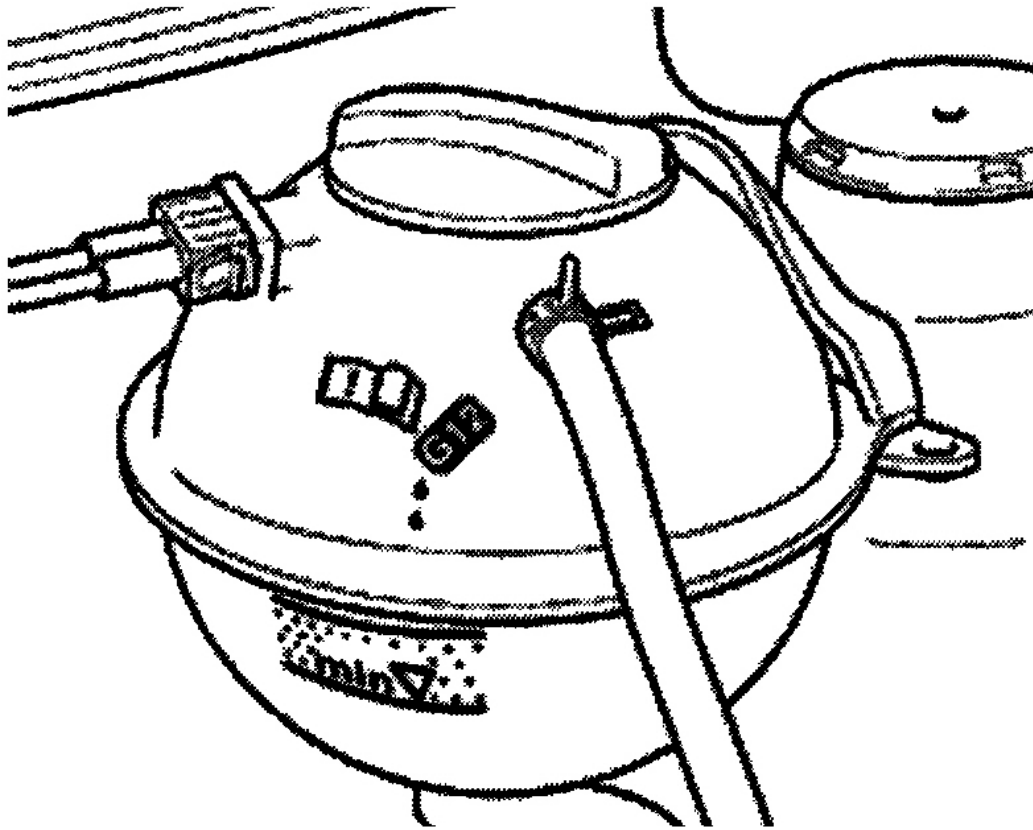

G00304523

Fig. 12: Identifying Expansion Tank Markings
Courtesy of VOLKSWAGEN UNITED STATES, INC.

SERVICING

WARNING: Cooling system is pressurized, when engine is at operating temperature. Wear gloves, and other appropriate protection. Slowly and carefully release system pressure, before performing any repairs.

Coolant does not usually need replacing. In case of larger repairs when coolant needs to be drained, new coolant must be used because, old has been exposed to oxidation and dirt. Flush cooling system when replacing coolant. To flush, fill system with clear water, and run engine for approximately 2 minutes. Drain cooling system. See **DRAINING, FILLING & BLEEDING** . Flushing system should remove most coolant residue.


Coolant to water ratio must not exceed 60%. Frost protection and cooling efficiency will decrease if the percentage of coolant is too high. For coolant to water ratio, see **COOLANT MIXTURE RECOMMENDATIONS** table under COOLING SYSTEM SPECIFICATIONS.

ADJUSTMENTS

Prior to removing drive belt, mark direction of rotation with chalk. Serpentine belt is self-adjusting. For proper belt routing, see **DRIVE BELT ROUTING** .


DRIVE BELT ROUTING

NOTE: Serpentine belt is self-adjusting. See **Fig. 13** or **Fig. 14** .

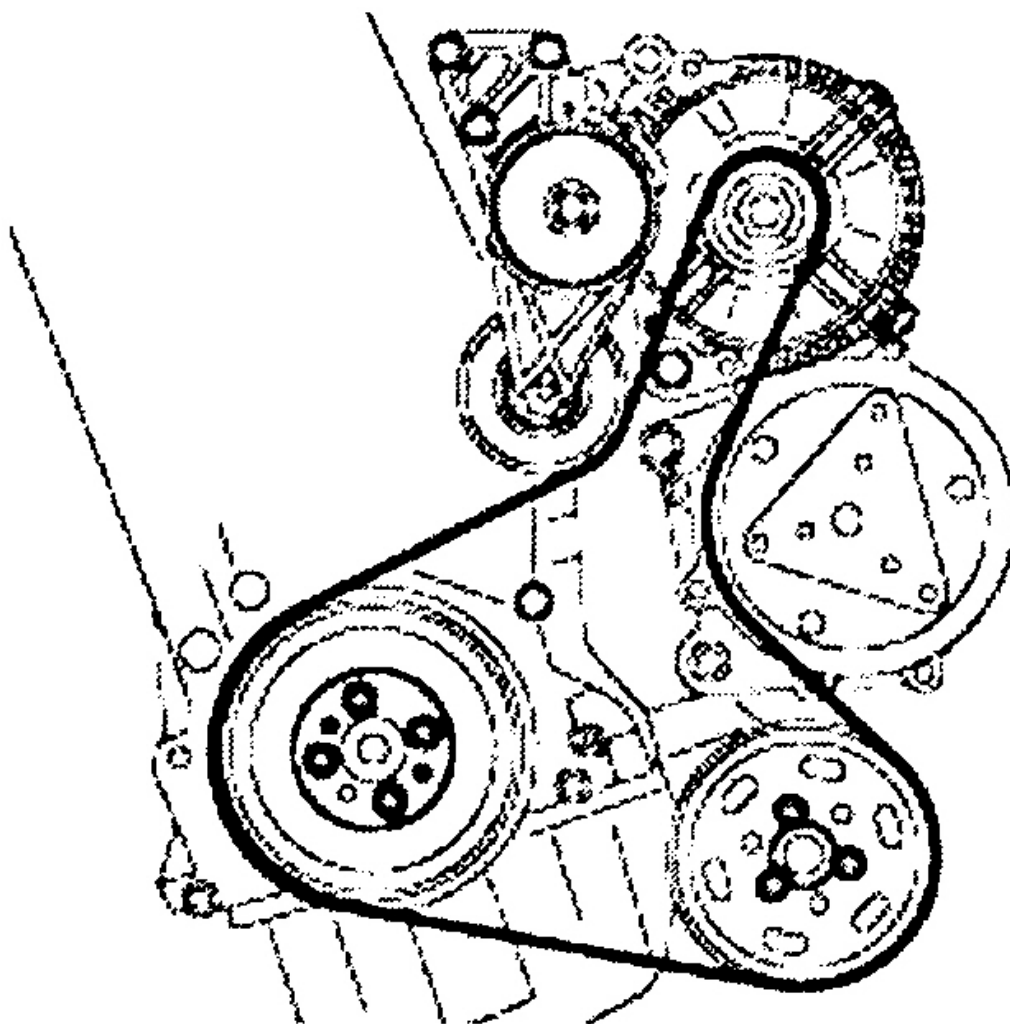

G00027340

Fig. 13: Drive Belt Routing (With A/C)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

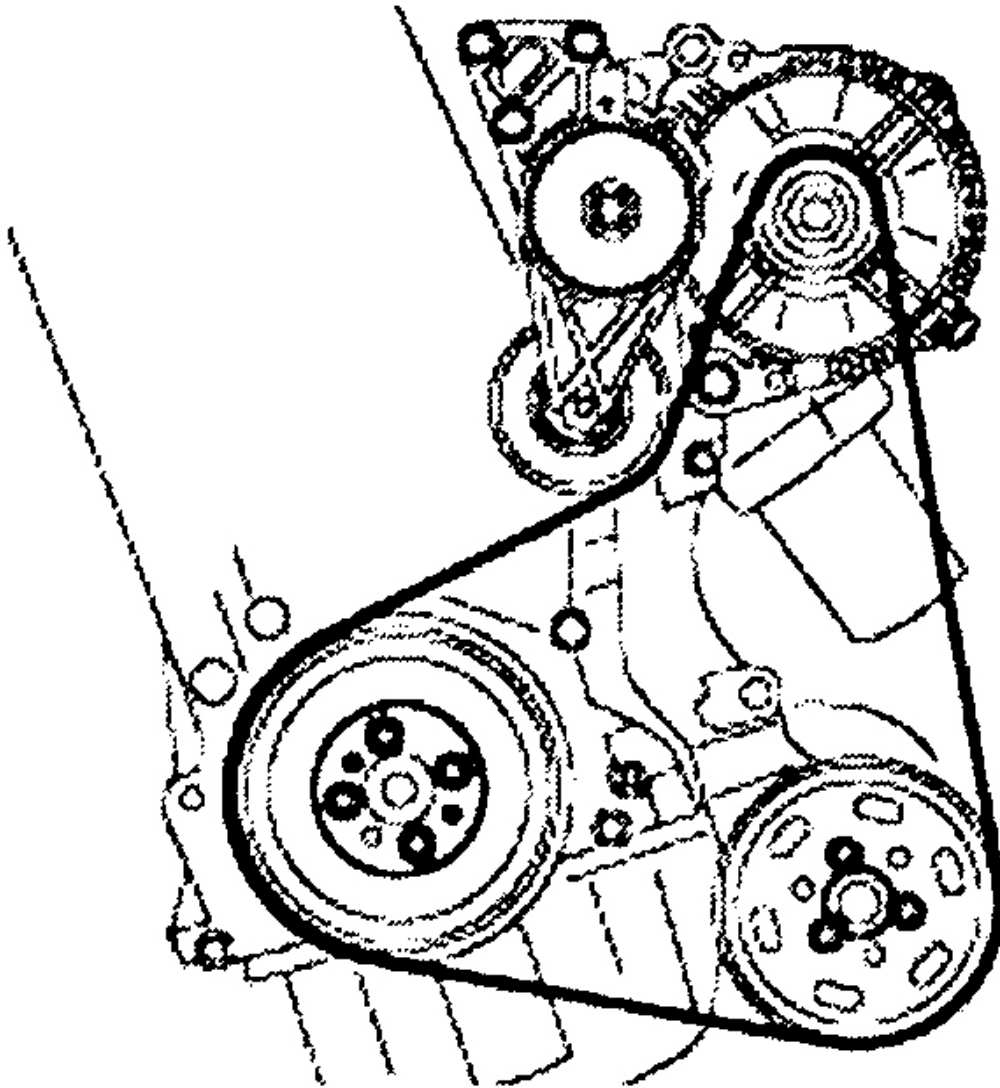

G00027339

Fig. 14: Drive Belt Routing (Without A/C)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

COOLING SYSTEM SPECIFICATIONS

COOLANT MIXTURE RECOMMENDATIONS

Application	Specification
Freeze Point	
Down To -13° F (- 25° C)	40% Coolant
Down To -31° F (- 35° C)	50% Coolant

COOLING SYSTEM SPECIFICATIONS

Application	Specification
Coolant Capacity	(1) 5.2 Qts. (5.0L)
Coolant Replacement Interval	(2)
Recommended Coolant Type	(3) G 012 A8 D
Thermostat	
Starts To Open	185°F (85°C)
Fully Open	220°F (105°C)
Opening Stroke	.28" (7 mm)
(1) Total coolant quantity may vary depending on vehicle equipment.	
(2) Manufacturer does not require routine coolant replacement. Coolant is only replaced during major repairs.	
(3) G12 coolant is Red in color. DO NOT mix Green and Red coolant. Mixing these two coolant types will cause severe engine damage.	

2002-04 ENGINE COOLING

Specifications & Drive Belt Routing - 1.9L TDI (ALH Engine Code)

ENGINE IDENTIFICATION

Engine identification code is stamped between diesel injection pump and exhaust manifold, on cylinder block. See **Fig. 1** . In addition, engine code and serial number are on a sticker on timing belt cover. Also engine code is listed on vehicle data plate.


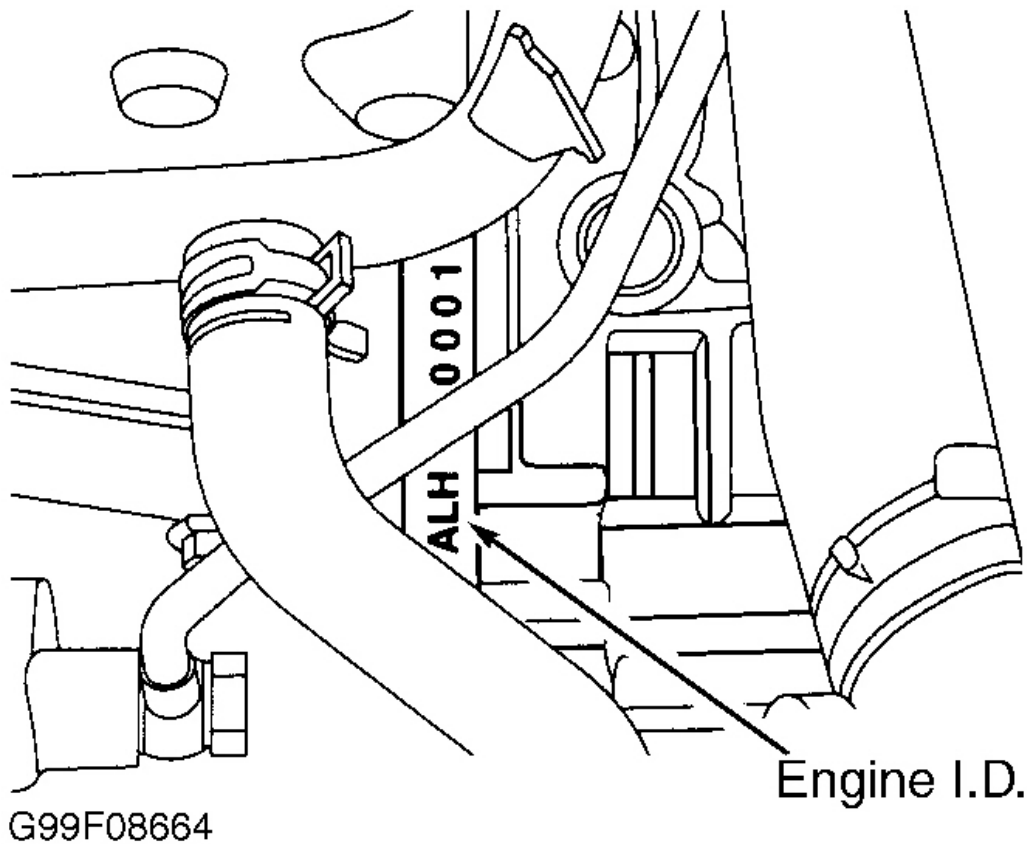


Fig. 1: Locating Engine Identification Code (1.9L TDI, ALH)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

COMPONENT LOCATIONS


COOLING SYSTEM IDENTIFICATION

NOTE: Three letter code indicates engine identification code. For location of engine code, see ENGINE IDENTIFICATION .

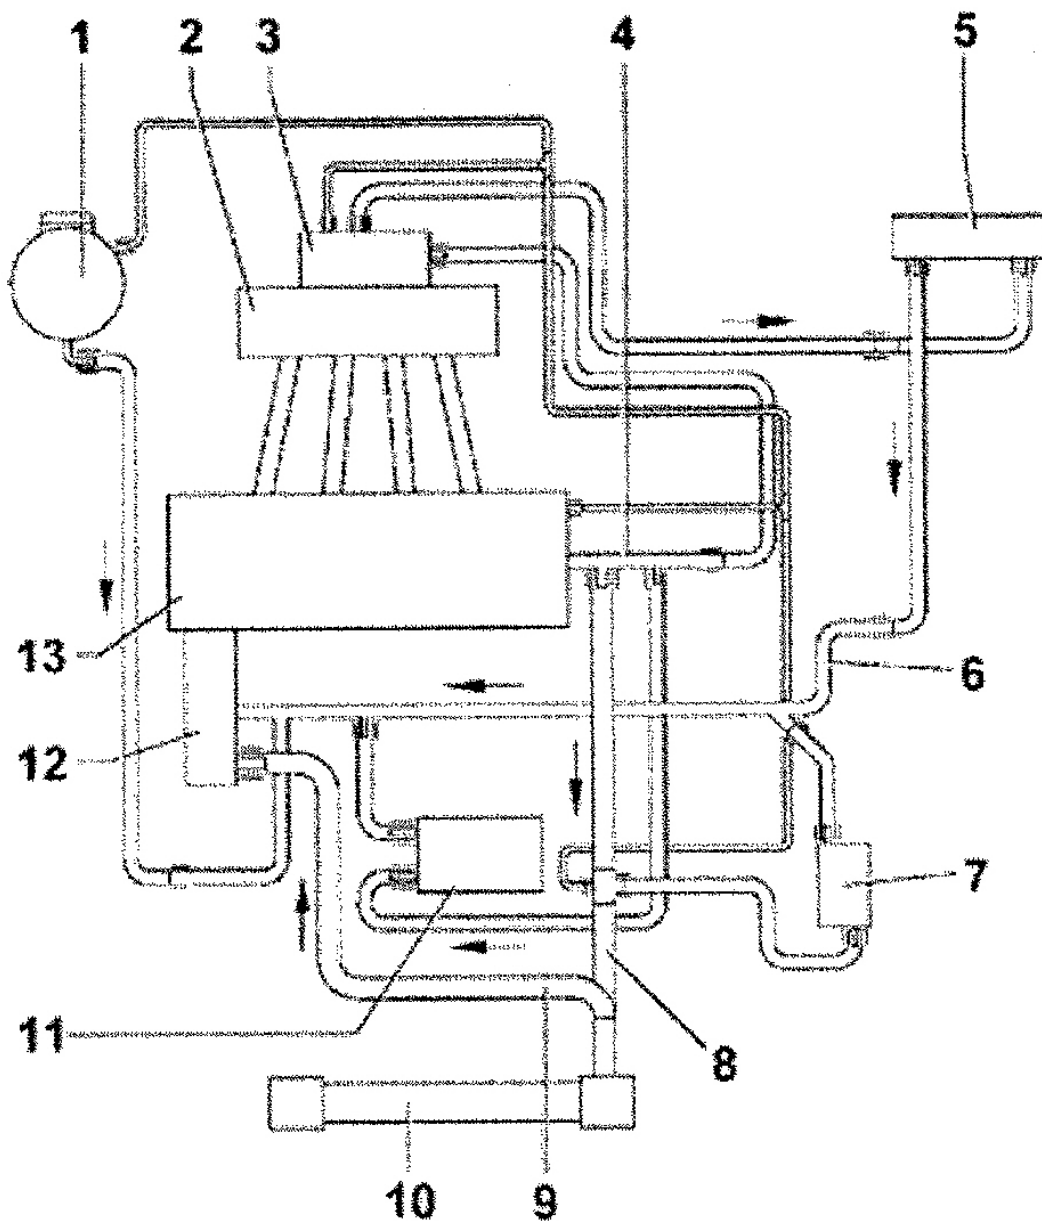

- | | |
|---|----------------------------------|
| 1. Expansion Tank | 8. Upper Radiator Hose |
| 2. Intake Manifold | 9. Lower Radiator Hose |
| 3. EGR Cooler | 10. Radiator |
| 4. Connector | 11. Oil Cooler |
| 5. Heater Core | 12. Water Pump/Thermostat |
| 6. Coolant Center Line | 13. Cylinder Head/Cylinder Block |
| 7. ATF Cooler (Automatic Transmission Only) | |

Fig. 2: Identifying Cooling System Component & Coolant Flow (1.9L TDI, Golf & Jetta)
 Courtesy of VOLKSWAGEN UNITED STATES, INC.

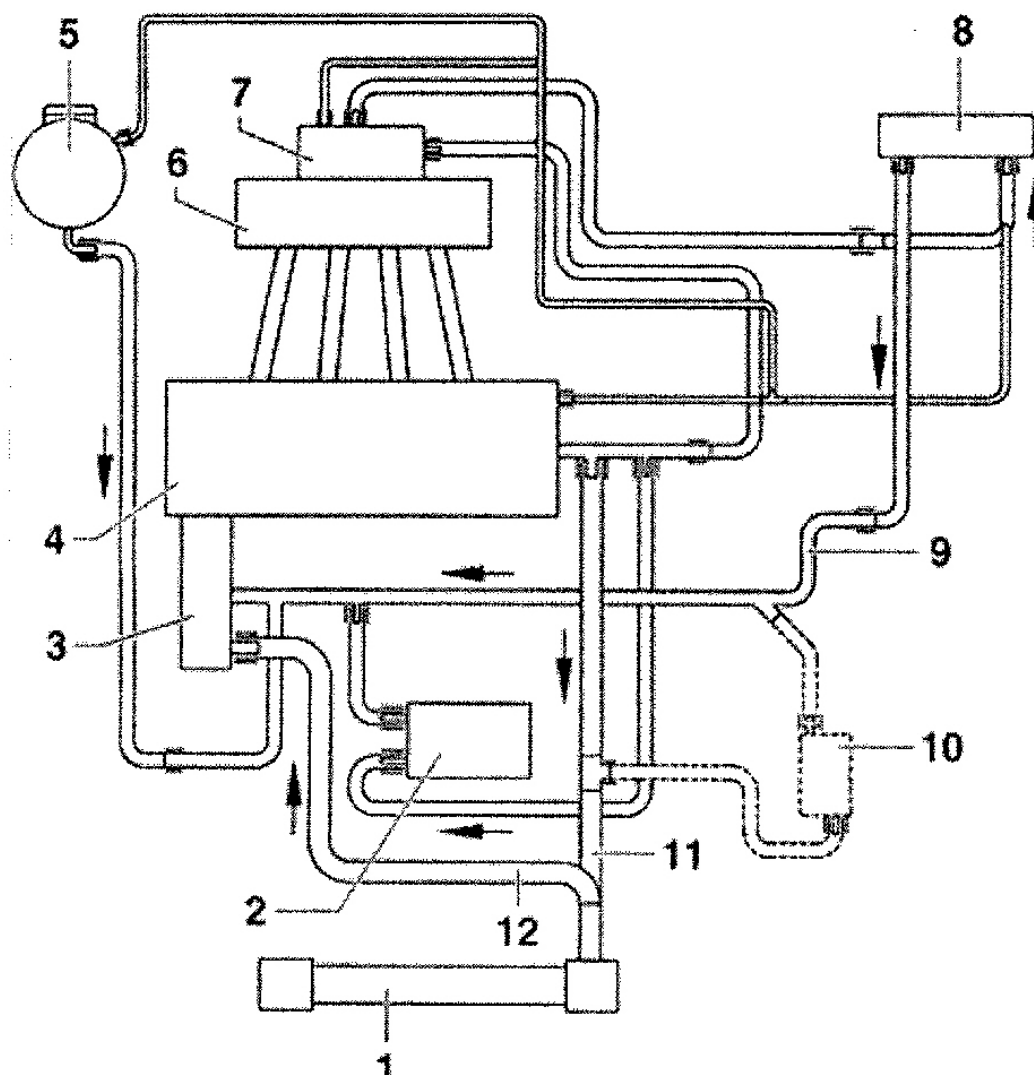

- | | |
|--------------------|-------------------------------|
| 1. Radiator | 8. Heat Exchanger |
| 2. Oil Cooler | 9. Coolant Pipe |
| 3. Water Pump | 10. Transmission Cooler |
| 4. Engine Block | (Automatic Transmission Only) |
| 5. Expansion Tank | 11. Upper Radiator Hose |
| 6. Intake Manifold | 12. Lower Radiator Hose |
| 7. EGR Cooler | |

Fig. 3: Identifying Cooling System Components & Coolant Flow (1.9L TDI, Beetle)

Courtesy of VOLKSWAGEN UNITED STATES, INC.

DRAINING, FILLING & BLEEDING

COOLING SYSTEM PRECAUTIONS

Use only coolant additive G12 meeting specification VW 774 D. G12 coolant is Red in color. G12 must not be mixed with any other additives. If fluid in expansion tank is Brown, this is an indication that G12 has been mixed with another type of coolant. In this case, coolant must be changed.


G12 coolant additive may be used in older vehicles when original coolant is drained and cooling system is flushed. Contaminated coolant must be drained immediately and cooling system flushed. See **SERVICING** . Also, if radiator, heat exchanger (heater core), cylinder head or cylinder head gasket, have been replaced, flush cooling system and replace engine coolant.

DRAINING, FILLING & BLEEDING COOLING SYSTEM

WARNING: Cooling system is pressurized, when engine is at operating temperature. Use caution and use other appropriate protective gear (safety glasses and gloves) when servicing cooling system. Slowly and carefully release system pressure, before performing any repairs.


1.9L TDI (Engine Code ALH)

1. Turn engine off, and allow to cool. Remove engine cover. Open cap on coolant expansion tank. Raise and support vehicle. Remove noise insulation panel from below engine compartment. See **Fig. 4** or **Fig. 5** . Place appropriate drain pan underneath vehicle.

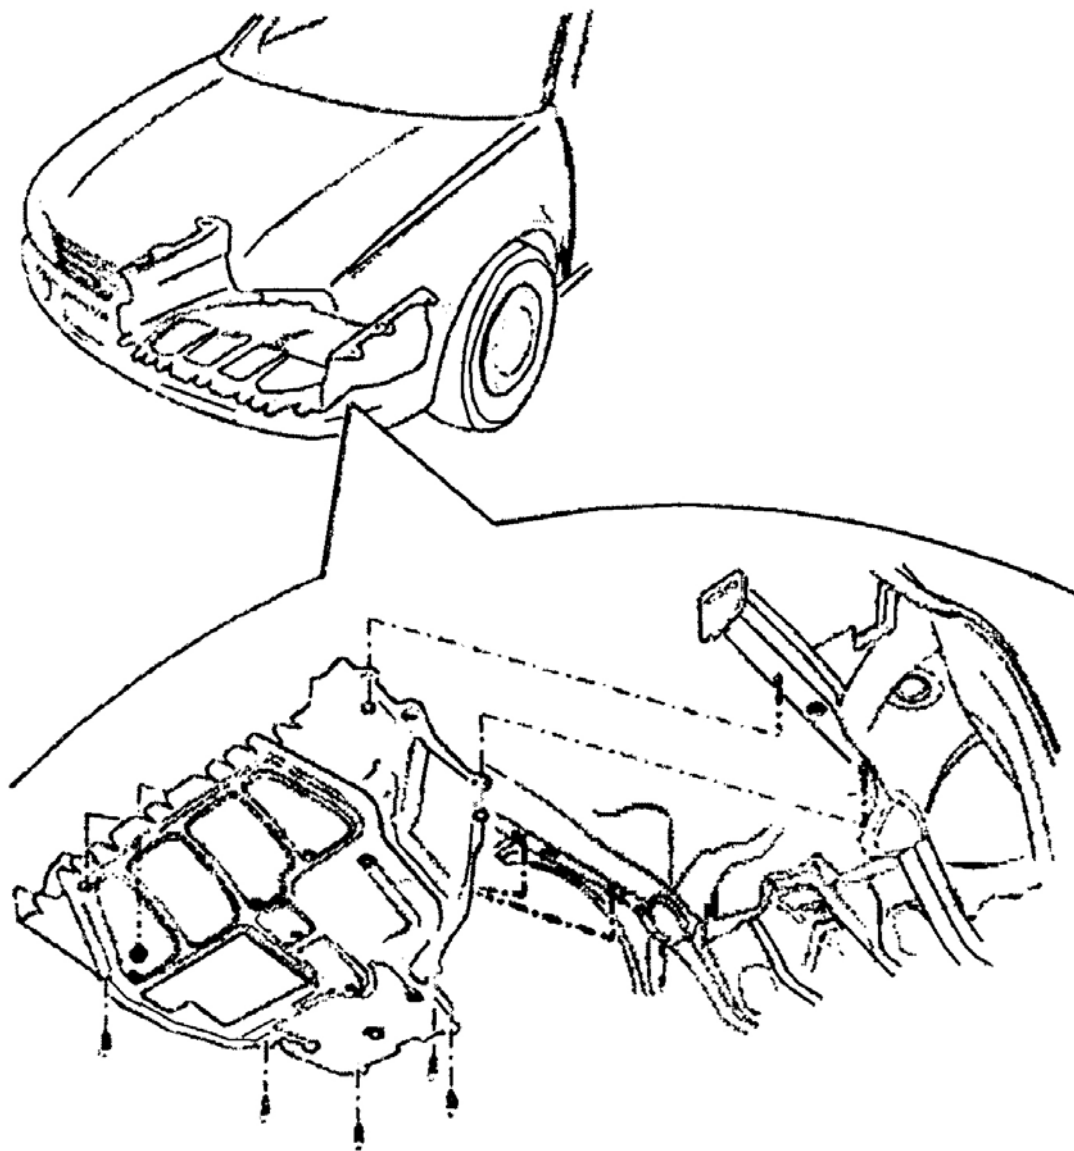

G00304535


Fig. 4: Identifying Noise Insulation Mounting Points (Golf & Jetta)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

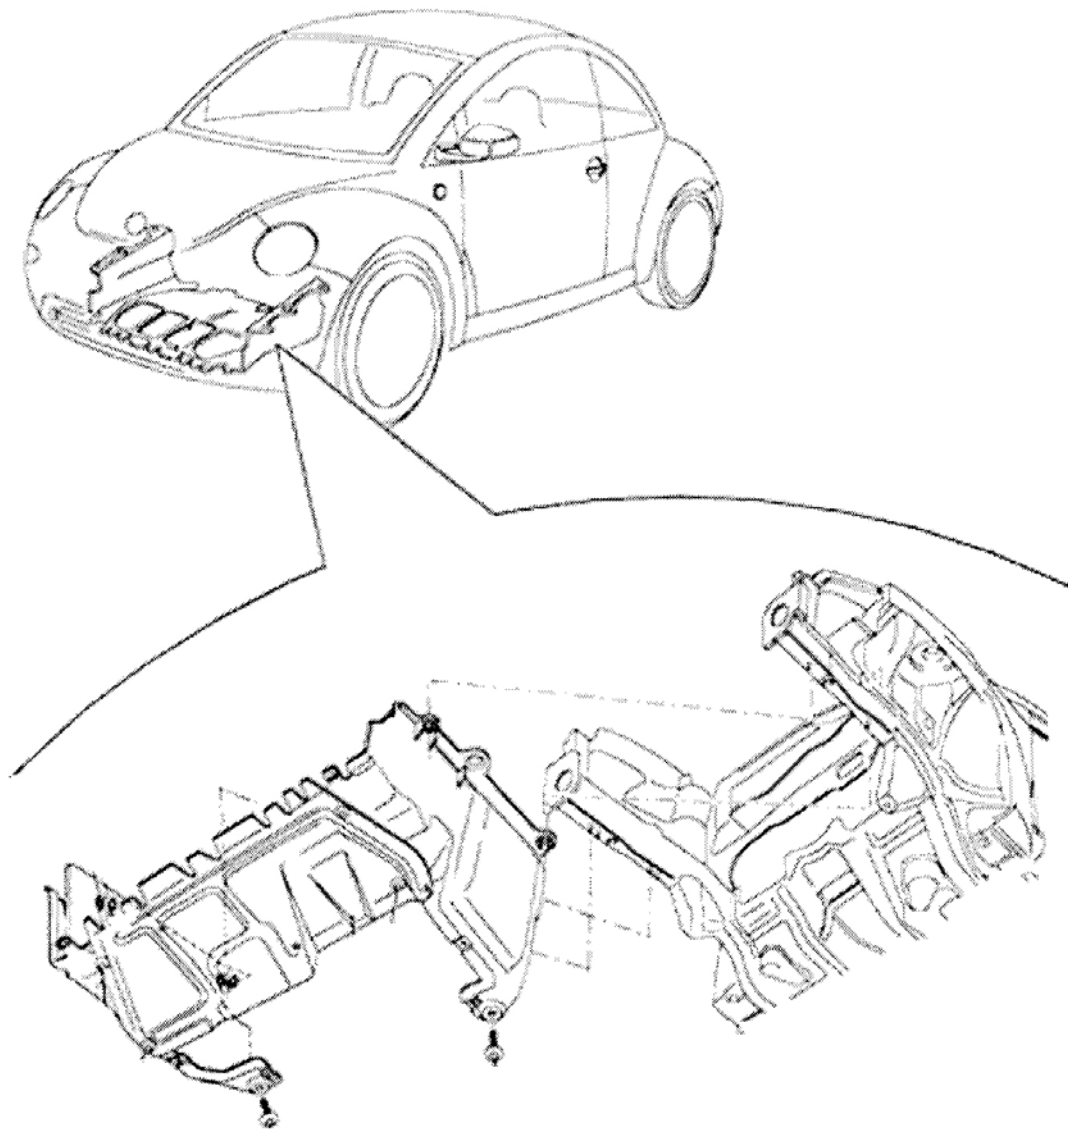

G00304525

Fig. 5: Identifying Noise Insulation Mounting Points (Beetle)
Courtesy of VOLKSWAGEN UNITED STATES, INC.


2. Unscrew drain plug (arrow), and drain coolant from radiator. See **Fig. 6** .

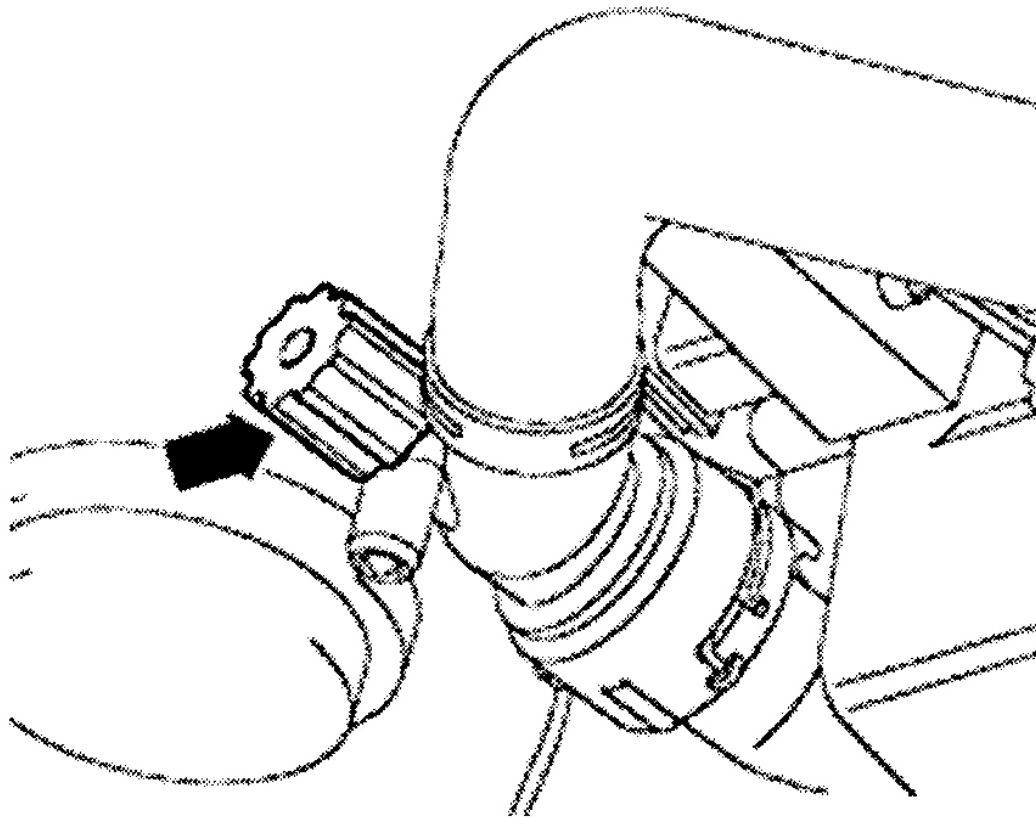

G00304428

Fig. 6: Identifying Drain Screw On Radiator
Courtesy of AUDI OF AMERICA, INC.

3. Remove coolant hose from oil cooler, and drain coolant from engine. See **Fig. 7** .

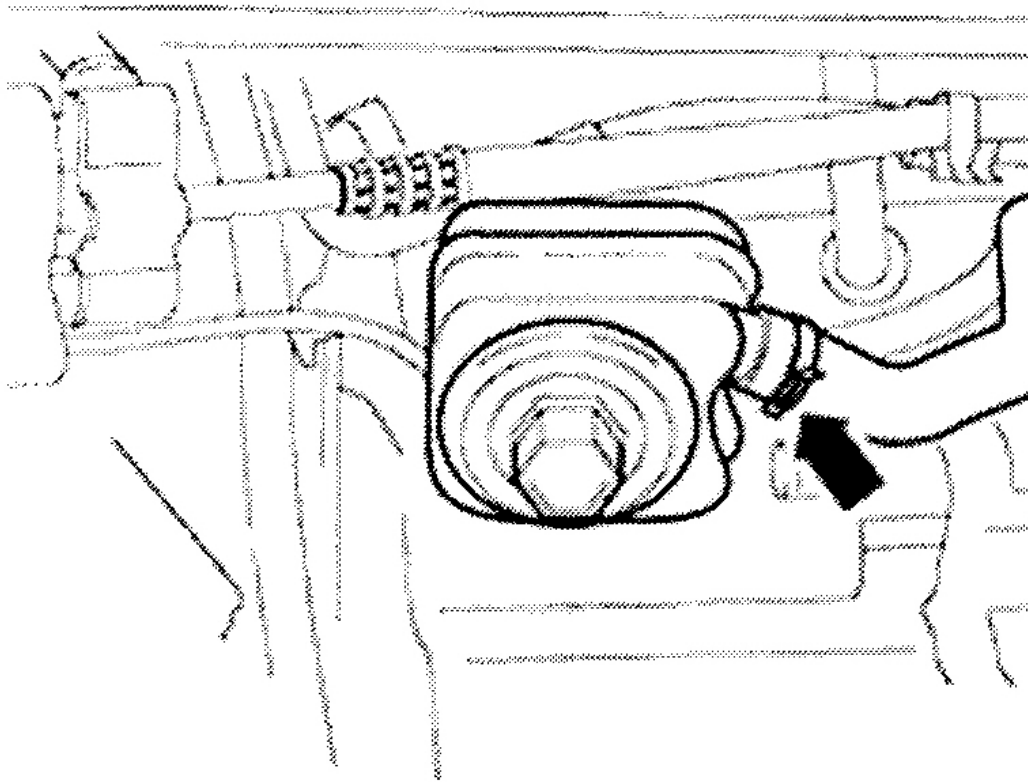


G00304534

Fig. 7: Locating Oil Cooler Hoses

Courtesy of VOLKSWAGEN UNITED STATES, INC.

CAUTION: DO NOT mix Green and Red coolant. Mixing these two coolant types will cause severe engine damage. Use ONLY G 012 A8 D Red coolant. See COOLING SYSTEM SPECIFICATIONS .

4. Close drain plug at radiator. Fill cooling system with recommended coolant mixture. See COOLING SYSTEM SPECIFICATIONS . Fill expansion tank with coolant to MAX mark. Install expansion tank cap.
5. Start engine, and let idle until coolant fan turns on. Check coolant level, and top off as necessary.
6. When engine is at normal operating temperature, coolant level must be on MAX mark, on expansion tank. See **Fig. 8** . When engine is cold, coolant level must be between MIN and MAX marks, on expansion tank.

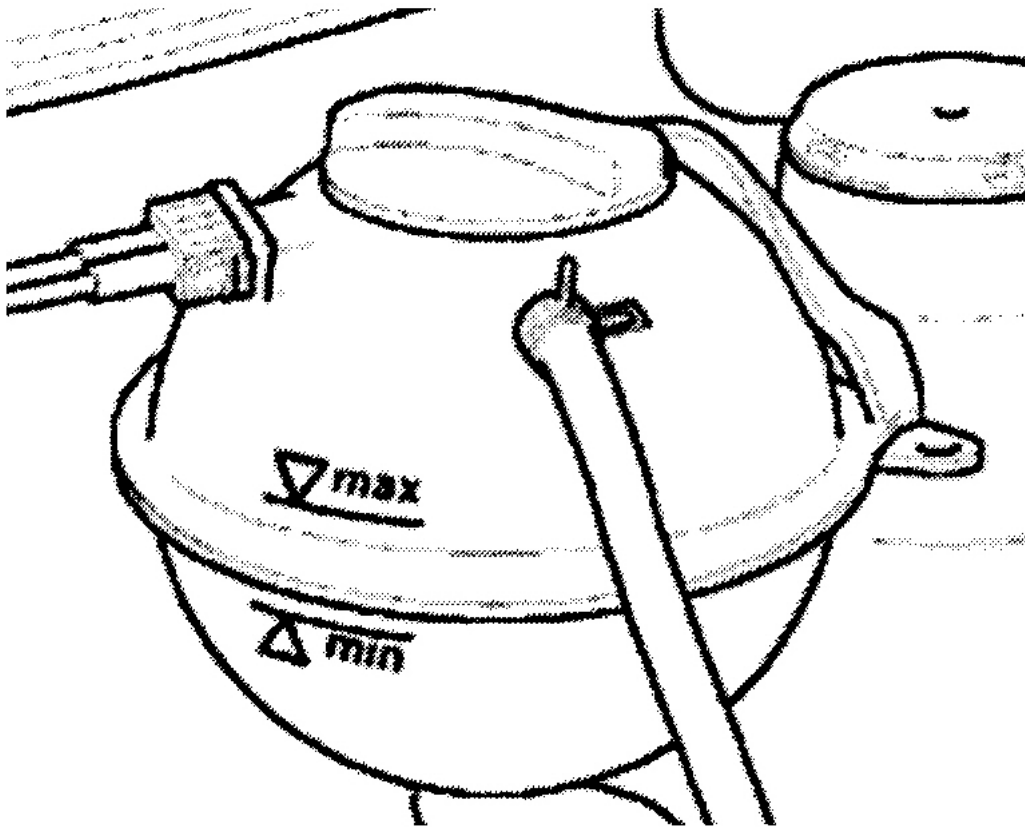

G00304536

Fig. 8: Identifying Expansion Tank Markings
Courtesy of VOLKSWAGEN UNITED STATES, INC.

SERVICING


Coolant does not usually need replacing. In cases of larger repairs when coolant needs to be drained, new coolant must be used because old coolant has been exposed to oxidation and dirt. Flush cooling system when replacing coolant. To flush, fill system with clear water, and run engine for approximately 2 minutes. Flushing system should remove most coolant residue. Fill with a mix of clean water and manufacturer recommended coolant. See **COOLING SYSTEM SPECIFICATIONS** .

Coolant to water ratio must not exceed 60%. Frost protection and cooling efficiency will decrease if the percentage of coolant is too high. For coolant to water ratio, see **COOLANT MIXTURE RECOMMENDATIONS** table under COOLING SYSTEM SPECIFICATIONS.

ADJUSTMENTS

Prior to removing drive belt, mark direction of rotation. Serpentine belt is self-adjusting. For proper belt routing, see **DRIVE BELT ROUTING** .


DRIVE BELT ROUTING

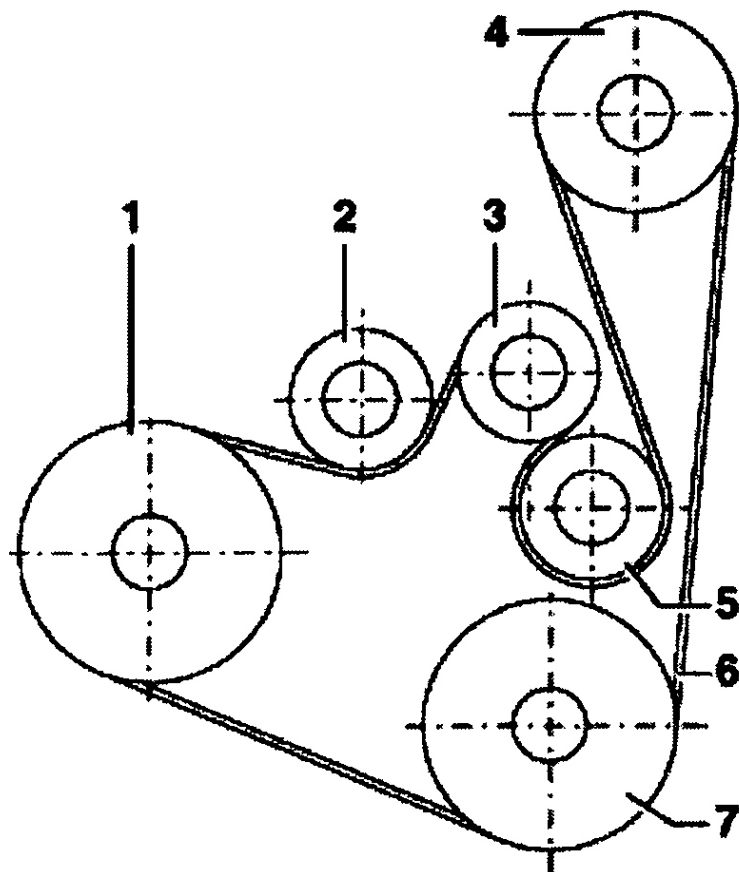

- 1- Vibration damper/pulley
- 2- Tensioner
- 3- Pulley-generator
- 4- Pulley-power steering pump
- 5- Idler pulley
- 6- Ribbed belt
- 7- Pulley-A/C compressor

G00027341

Fig. 9: Drive Belt Routing (With A/C)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

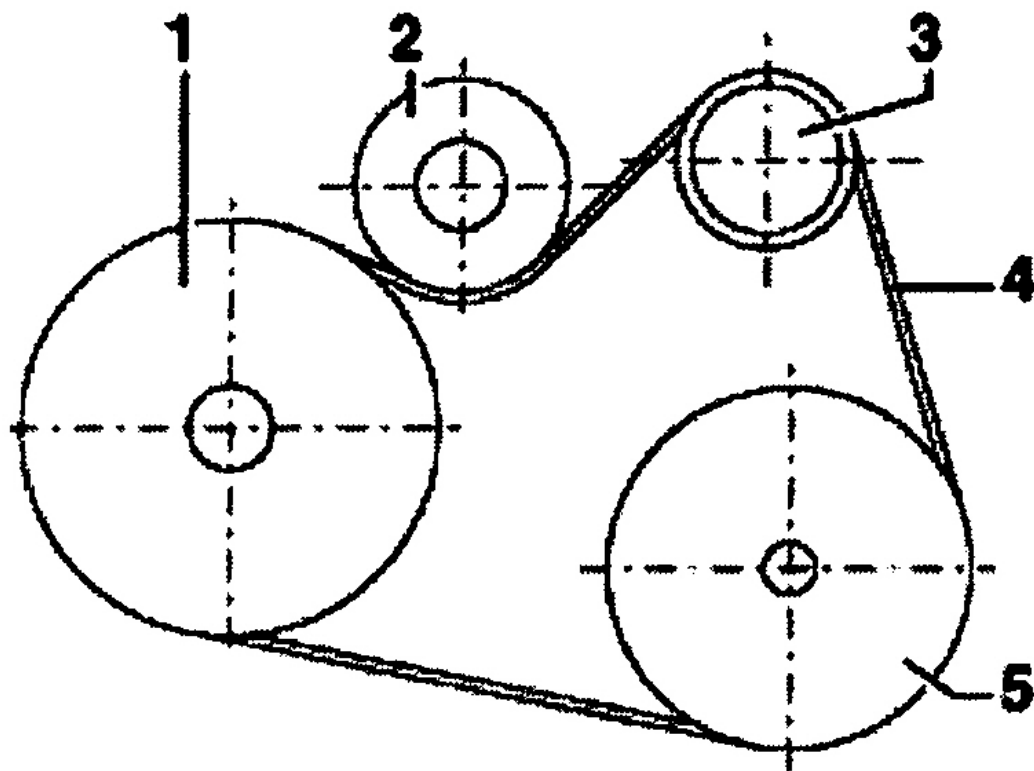

1- Vibration damper/pulley

2- Tensioner

3- Pulley-generator

4- Ribbed belt

5- Pulley-power steering pump

G00027342

Fig. 10: Drive Belt Routing (Without A/C)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

COOLANT MIXTURE RECOMMENDATIONS

Application	Specification
Freezing Point	
Down To -13° F (- 25° C)	40% Coolant
Down To -31° F (- 35° C)	50% Coolant

COOLING SYSTEM SPECIFICATIONS

Application	Specification
Coolant Capacity	(1) 6.3 Qts. (6.0L)
Coolant Replacement Interval	(2)
Recommended Coolant	(3) G 012 A8 D
Thermostat	
Start To Open	185° F (85° C)
Fully Open	221° F (105° C)
Opening Lift	7 mm
(1) Total coolant quantity may vary depending on vehicle equipment.	
(2) Manufacturer does not require routine coolant replacement. Replace coolant only if major repair is necessary.	
(3) G12 coolant is Red in color. DO NOT mix Green and Red coolant. Mixing these two coolant types will cause severe engine damage.	

2002-04 ENGINE COOLING


Specifications & Drive Belt Routing - 2.0L (AEG, AVH, AZG, BBW, BDC, BEV & BGD Engine Code)

ENGINE IDENTIFICATION

Engine identification is stamped on machined surface between engine and transmission. See 2.0L ENGINE/MODEL IDENTIFICATION table. Additionally, there is a sticker, located on timing belt guard. Engine code is also included on vehicle data plate.


2.0L ENGINE/MODEL IDENTIFICATION

Year	Model	(1) Engine Code
2002		
	Golf & Jetta	AVH & AZG
	New Beetle	AEG, AVH/AZG
2003		
	Golf & Jetta	AVH, AZG & BBW
	New Beetle	AVH/AZG
	New Beetle Convertible	BDC
2004		
	Golf & Jetta	AVH, AZG, BBW & BEV
	New Beetle	BEV
	New Beetle Convertible	BGD
(1) See Fig. 1 , Fig. 2 or Fig. 3 .		

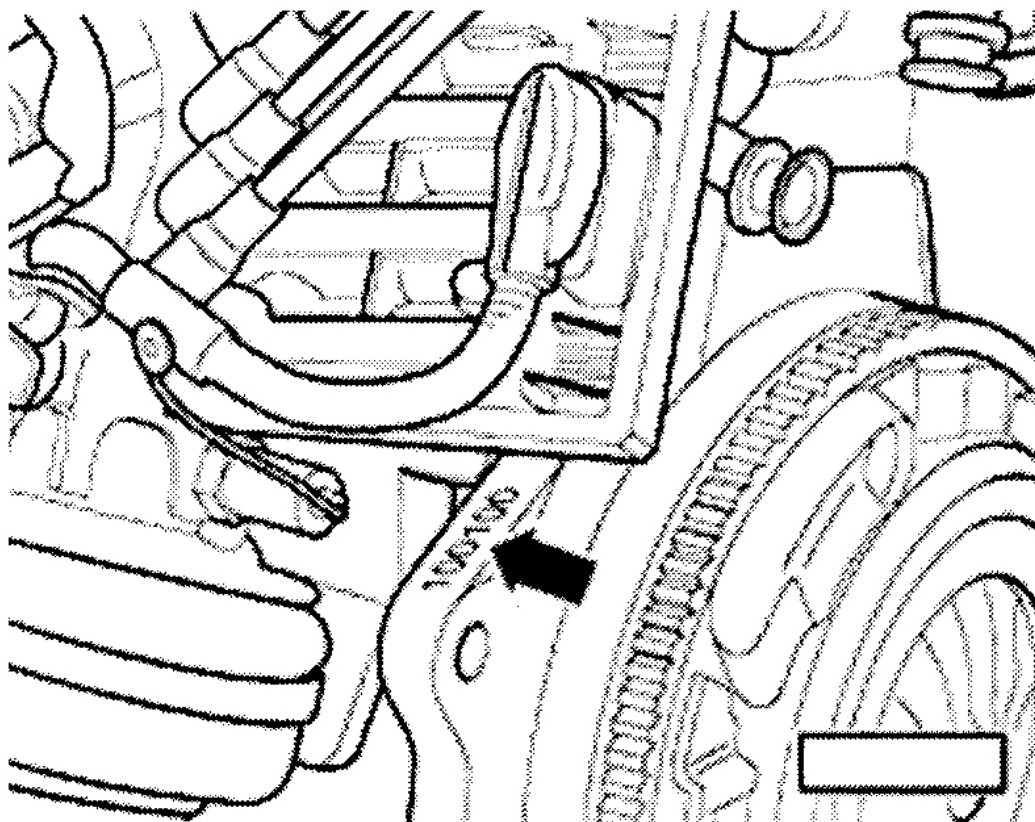


G00304545

Fig. 1: Locating Engine Code (AVH, AZG, BBW & BEV - Golf & Jetta)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

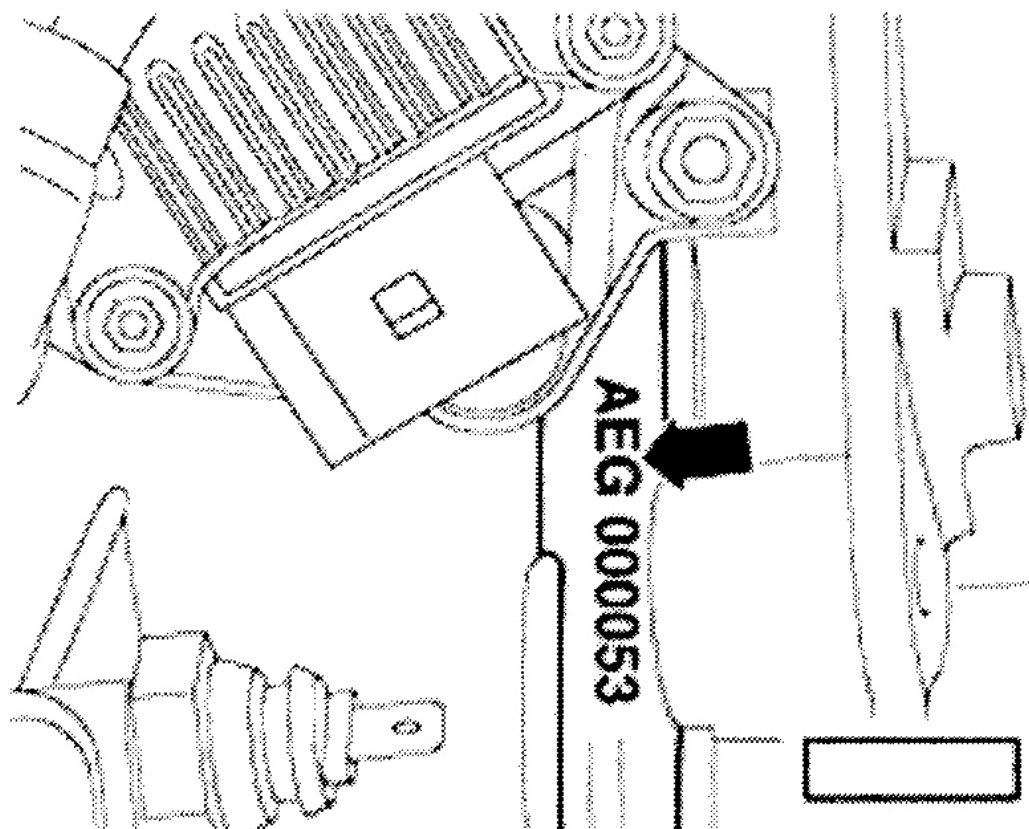

G00304546

Fig. 2: Locating Engine Code (AEG - New Beetle)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

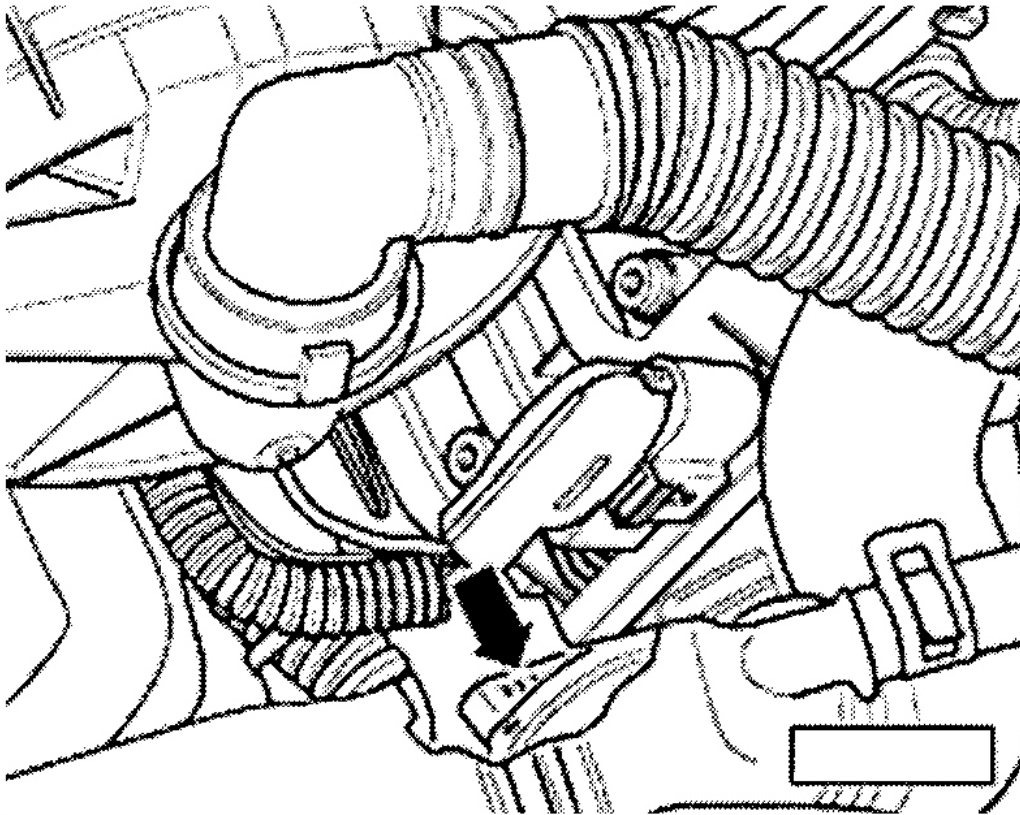


G00304547

Fig. 3: Locating Engine Code (AVH, AZG, BDC, BEV & BGD - New Beetle)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

COMPONENT LOCATIONS

COOLING SYSTEM IDENTIFICATION

NOTE: Three letter code indicates engine identification code. For location of engine code, see ENGINE IDENTIFICATION .

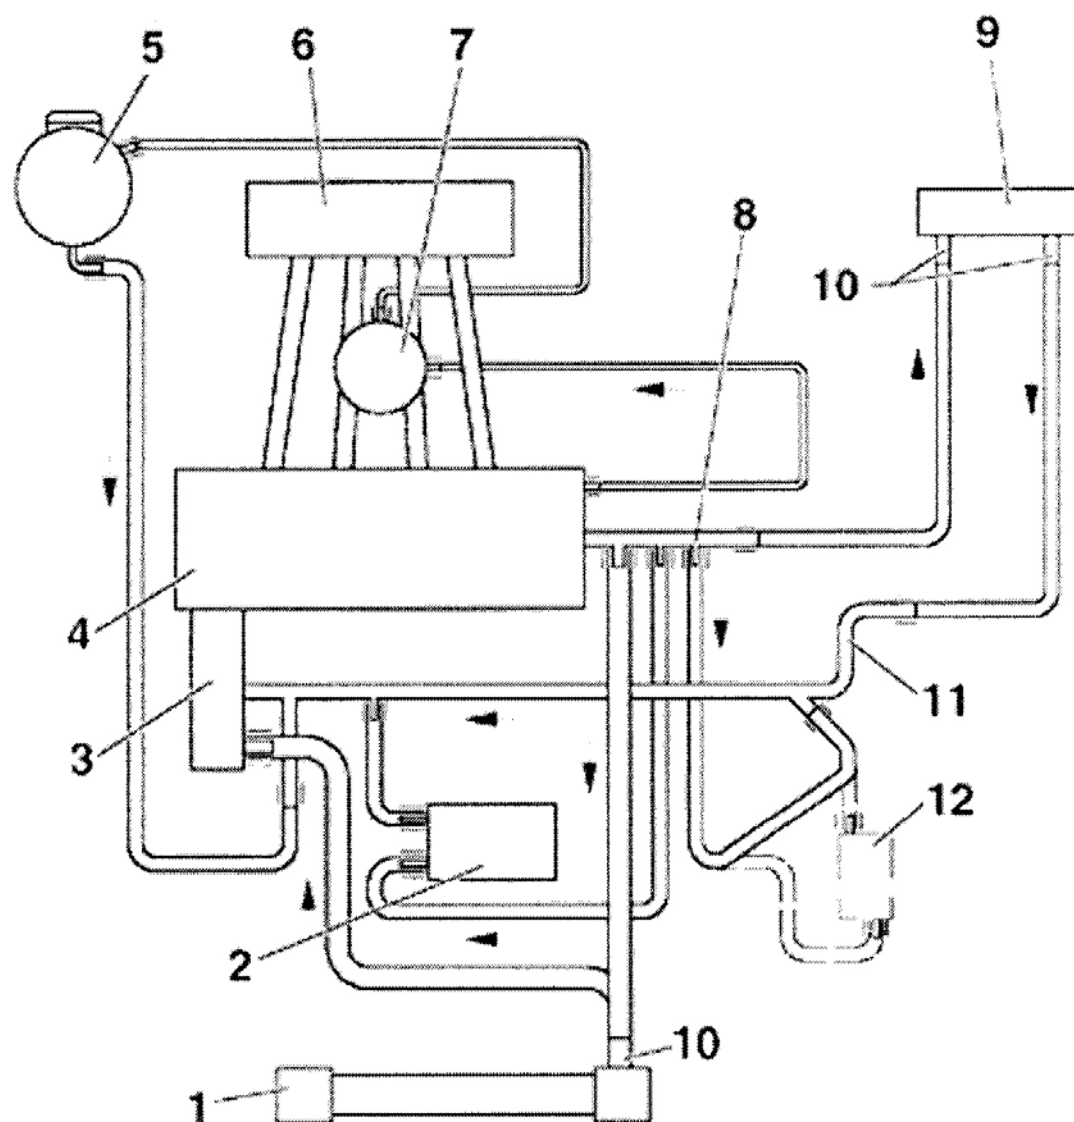

1. Radiator
2. Oil Cooler
3. Water Pump/Thermostat
4. Cylinder Head/Cylinder Block
5. Expansion Tank
6. Intake Manifold
7. Throttle Valve Control Module
8. Connecting Unions
9. Heat Exchanger
10. Quick-Action Coupling
11. Coolant Pipe
12. ATE Cooler (Automatic Transmission Only)

Fig. 4: Identifying Cooling System Components & Coolant Flow (AEG, AVH, AZG, BDC, BEV & BGD - New Beetle)

Courtesy of VOLKSWAGEN UNITED STATES, INC.

DRAINING, FILLING & BLEEDING

COOLING SYSTEM PRECAUTIONS

Golf & Jetta

CAUTION: On model year 2004 Golf and Jetta, engine code BEV uses G12 coolant that is Lilac (Purple) in color. Refer to TSB Group 19 No. 02-01, dated Dec. 20, 2002. See COOLANT (ANTIFREEZE), MIXING PRECAUTIONS .

For all except 2004 Golf and Jetta with BEV engine code, use only coolant additive G12 meeting specification VW 774 D. G12 coolant is Red in color. G12 must not be mixed with any other additives. If fluid in expansion tank is Brown, this is an indication that G12 has been mixed with another type of coolant. In this case, coolant must be changed.

G12 coolant additive may be used in older vehicles when original coolant is drained and cooling system is flushed. Contaminated coolant must be drained immediately and cooling system flushed. See SERVICING . Also, if radiator, heat exchanger (heater core), cylinder head or cylinder head gasket, have been replaced, flush cooling system and replace engine coolant.

New Beetle

NOTE: Cooling system precautions reference to TSB Group 19 No. 02-01, dated Dec. 20, 2002. See COOLANT (ANTIFREEZE), MIXING PRECAUTIONS .

Use only coolant additive G 12 meeting specification VW 774 F. G 12 coolant is Lilac (Purple) in color. Red coolant G12, meeting specification VW 774 D, can be mixed with G 12 Lilac coolant. G 12 must NOT be mixed with any other additives. If fluid in expansion tank is Brown, this is an indication that G 12 has been mixed with another type of coolant. In this case, coolant must be changed.

G 12 coolant additive may be used in older vehicles when original coolant is drained and cooling system is flushed. Contaminated coolant must be drained immediately and cooling system flushed. See SERVICING . Also, if radiator, heat exchanger (heater core), cylinder head or cylinder head gasket, have been replaced, flush cooling system and replace engine coolant.

DRAINING, FILLING & BLEEDING COOLING SYSTEM


Golf & Jetta

WARNING: Cooling system is pressurized, when engine is at operating temperature. Use caution and use other appropriate protective gear (safety glasses and gloves) when servicing cooling system. Slowly and carefully release

system pressure, before performing any repairs.

CAUTION: On model year 2004 Golf and Jetta, engine code BEV, uses G12 coolant that is Lilac (Purple) in color. Refer to TSB Group 19 No. 02-01, dated Dec. 20, 2002. See COOLANT (ANTIFREEZE), MIXING PRECAUTIONS .

1. Turn engine off, and allow to cool. Open cap on coolant expansion tank. Raise and support vehicle. Remove noise insulation panel from below engine compartment. See Fig. 5 .

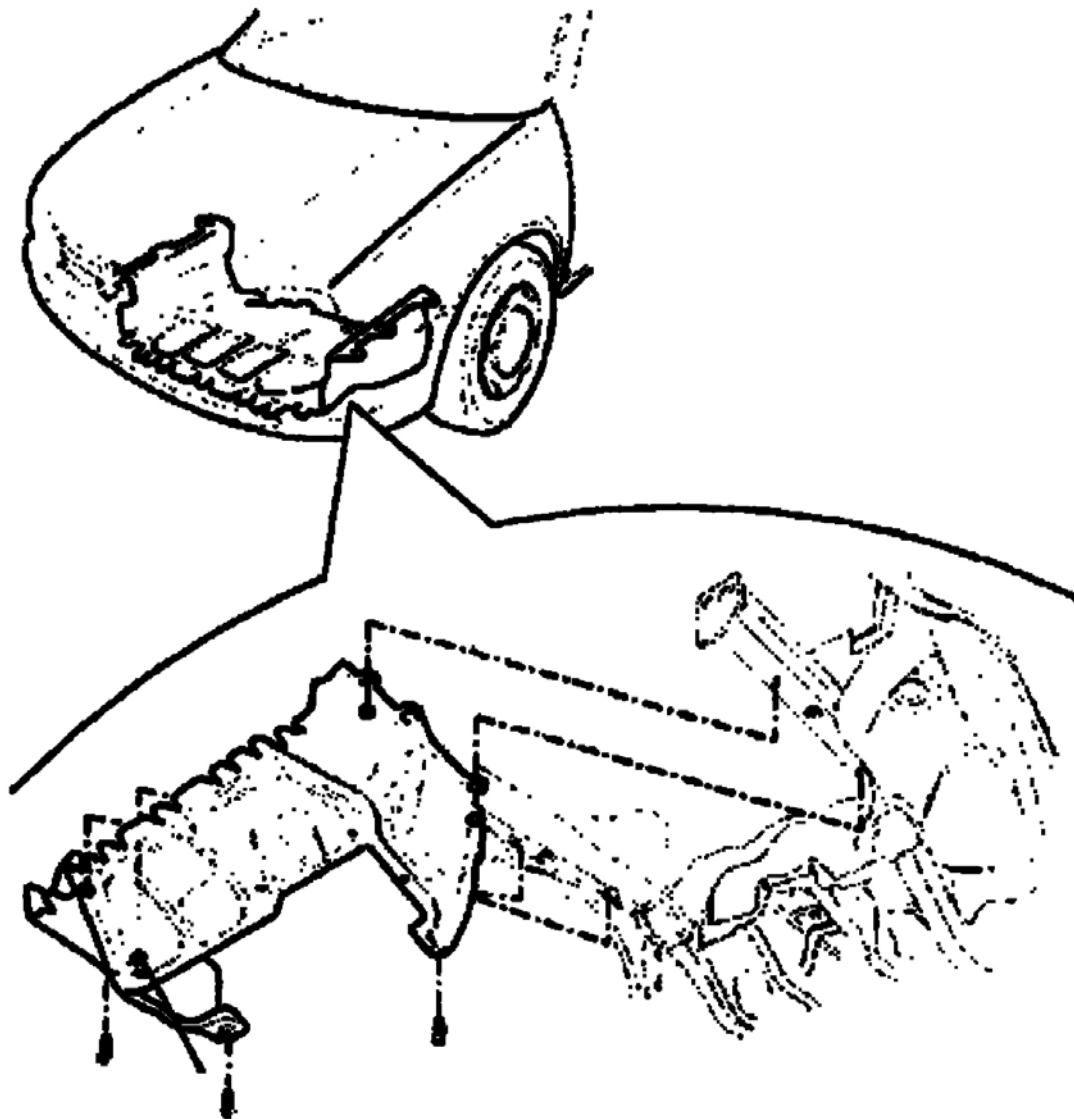


G00314522

Fig. 5: Identifying Noise Insulation Mounting Points


Courtesy of VOLKSWAGEN UNITED STATES, INC.

2. Unscrew drain plug (arrow), and drain coolant from radiator. See **Fig. 6** . Remove coolant hose from oil cooler (arrow). See **Fig. 7** . Drain coolant from engine.

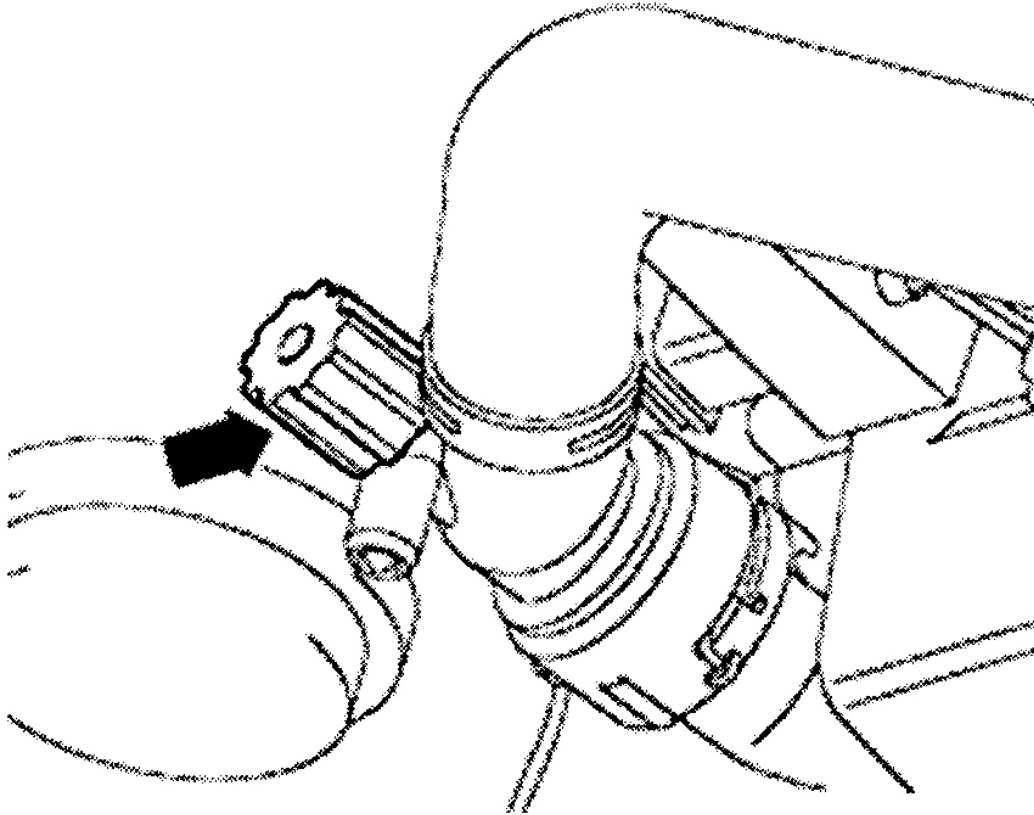

G00304428

Fig. 6: Identifying Drain Screw On Radiator
Courtesy of AUDI OF AMERICA, INC.

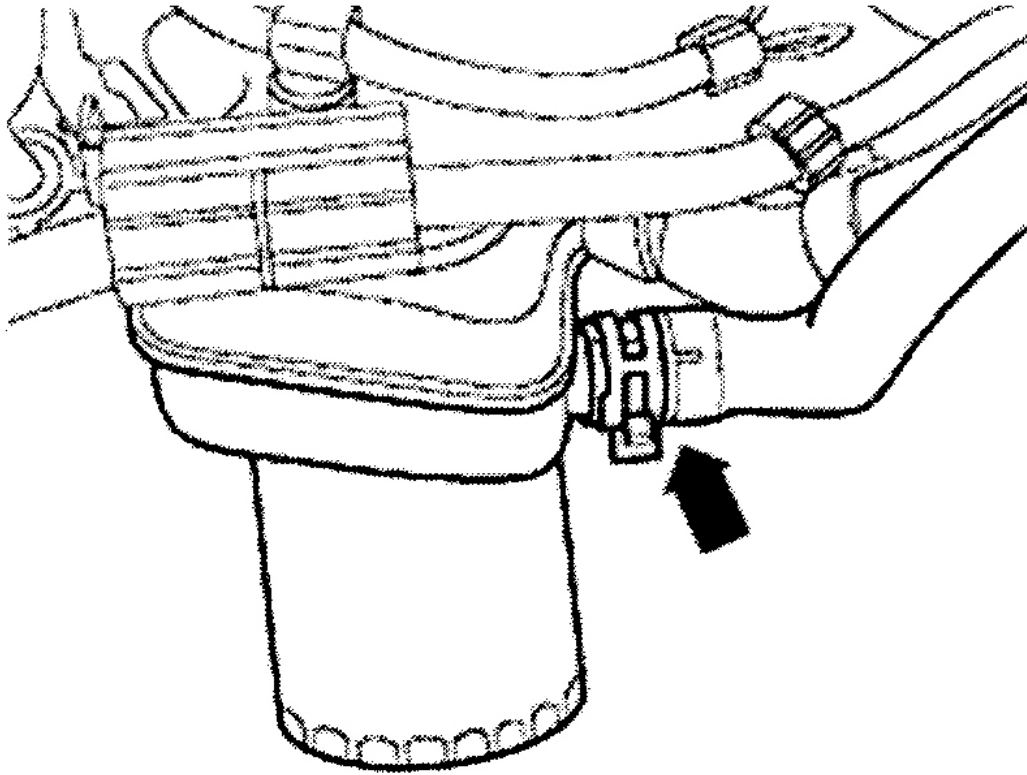


G00304429

Fig. 7: Removing Oil Cooler Coolant Hose
Courtesy of AUDI OF AMERICA, INC.

3. Turn radiator drain screw closed, and tighten. Push coolant hose onto oil cooler, and tighten hose clamp.

CAUTION: DO NOT mix Green and Red coolant. Mixing these two coolant types will cause severe engine damage. Use ONLY G 012 A8 D Red coolant. See COOLING SYSTEM SPECIFICATIONS .

CAUTION: On model year 2004 Golf and Jetta, engine code BEV, uses G12 coolant that is Lilac (Purple) in color. Refer to TSB Group 19 No. 02-01, dated Dec. 20, 2002. See COOLANT (ANTIFREEZE), MIXING PRECAUTIONS .

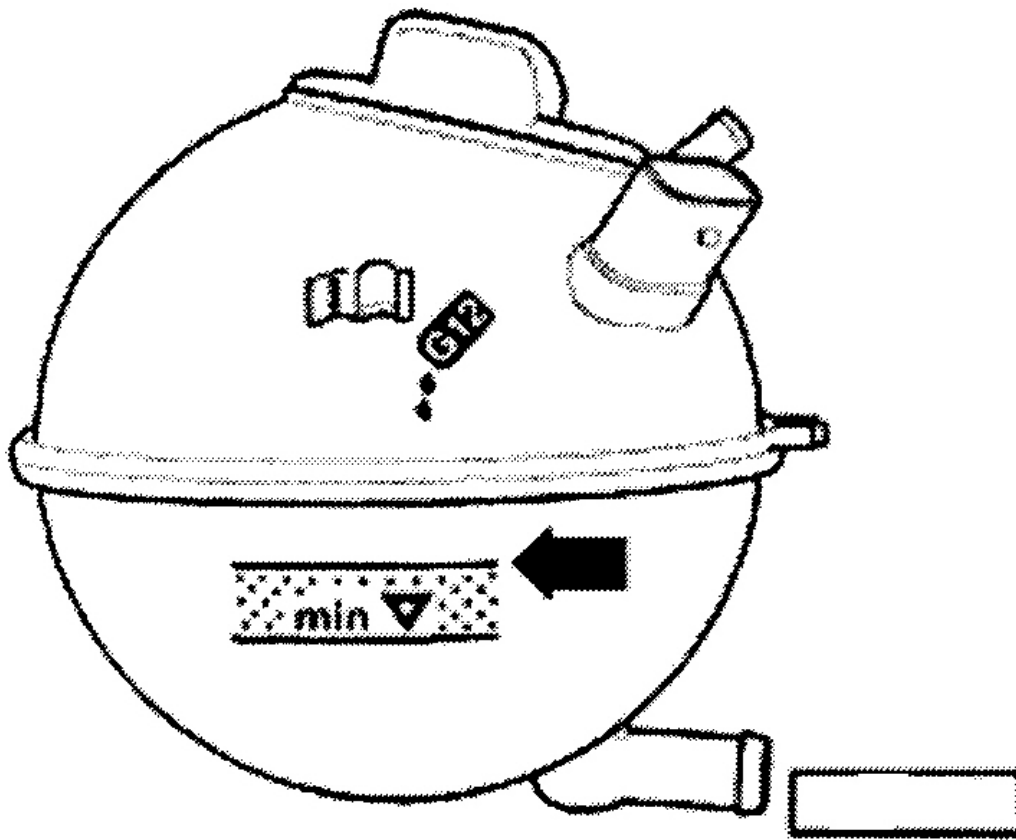

G00304550

Fig. 8: Identifying Expansion Tank Markings

Courtesy of VOLKSWAGEN UNITED STATES, INC.

4. If VAS 6096 Charging Unit is available, close drain plug at radiator. Connect oil cooler hoses. Fill cooling system according to VAS 6096 Charging Unit instruction manual. Fill cooling system with recommended coolant mixture. See **COOLING SYSTEM SPECIFICATIONS** . If VAS 6096 Charging Unit is not available, close drain plug at radiator. Connect oil cooler hoses. Fill cooling system with recommended coolant mixture. See **COOLING SYSTEM SPECIFICATIONS** . Slowly fill expansion tank with coolant to upper hatch mark. See **Fig. 8** . Install expansion tank cap.
5. Turn off A/C and heat controls. Start engine, and raise engine speed to 2000 RPM for approximately 3 minutes. Allow engine to idle, until coolant fan turns on. Check coolant level, and top off as necessary. Turn ignition off.
6. When engine is at normal operating temperature, coolant level must be at upper marking of shaded area, on expansion tank. When engine is cold, coolant level should be at approximately middle of shaded area. See **Fig. 8** .

WARNING: Cooling system is pressurized, when engine is at operating temperature. Use caution and use other appropriate protective gear (safety glasses and gloves) when servicing cooling system. Slowly and carefully release system pressure, before performing any repairs.

1. Turn engine off, and allow to cool. Open cap on coolant expansion tank. Raise and support vehicle. Remove noise insulation panel from below engine compartment. See **Fig. 9** or **Fig. 10** . Place appropriate drain pan underneath vehicle.


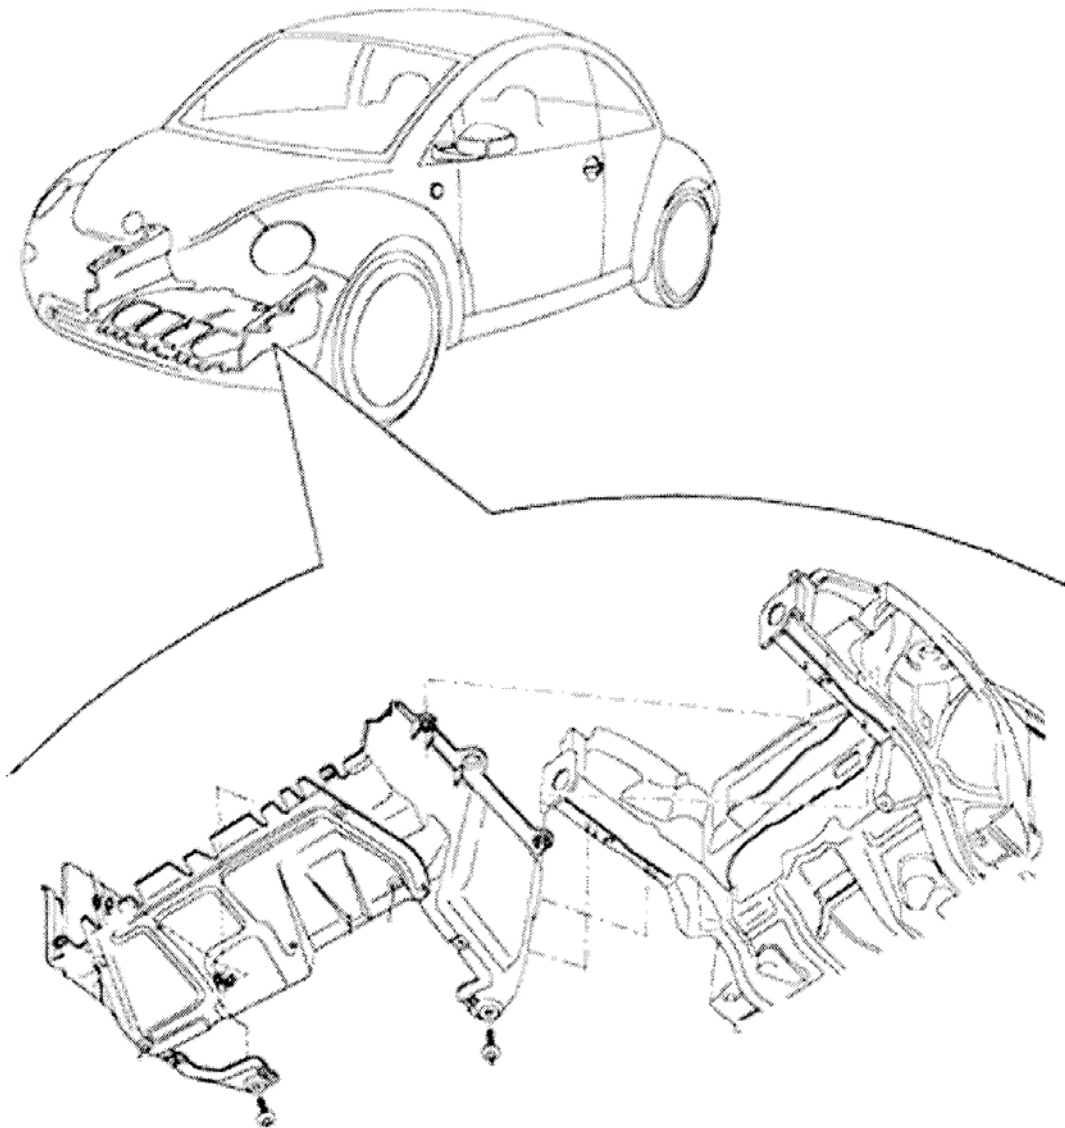


Fig. 9: Identifying Noise Insulation Mounting Points (New Beetle)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

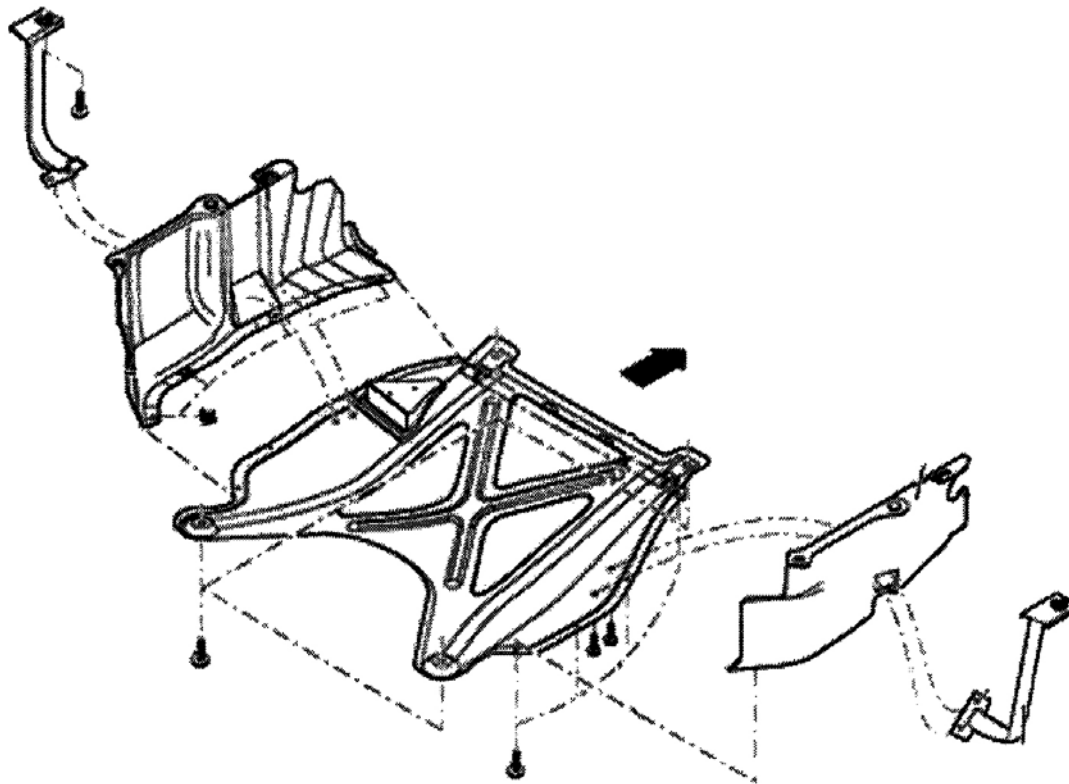

G00304526

Fig. 10: Identifying Noise Insulation Mounting Points (New Beetle Convertible)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

2. Unscrew drain plug (arrow), and drain coolant from radiator. See **Fig. 6** .
3. Remove coolant hose from oil cooler, and drain coolant from engine. See **Fig. 7** .


CAUTION: DO NOT mix Green with Lilac coolant. Mixing these coolant types will cause severe engine damage. Use ONLY G 012 A8 F Lilac coolant. See COOLING SYSTEM SPECIFICATIONS .

NOTE: If filling cooling system, using VAG 6096 Charging Unit, go to step 9 .

4. On vehicles with expansion tank MAX/MIN markings, close drain plug at radiator. Connect oil cooler hoses. Fill cooling system with recommended coolant mixture. See **COOLING SYSTEM SPECIFICATIONS** . Install expansion tank cap. Turn off A/C and heater controls. Start engine, and raise engine speed to 2000 RPM for approximately 3 minutes. Allow engine to idle, until coolant fan

turns on. Turn ignition off.


5. Check coolant level, and top off as necessary. When engine is at normal operating temperature, coolant level must be on MAX mark, on expansion tank. See **Fig. 11** . When engine is cold, coolant level must be between MIN and MAX marks, on expansion tank.

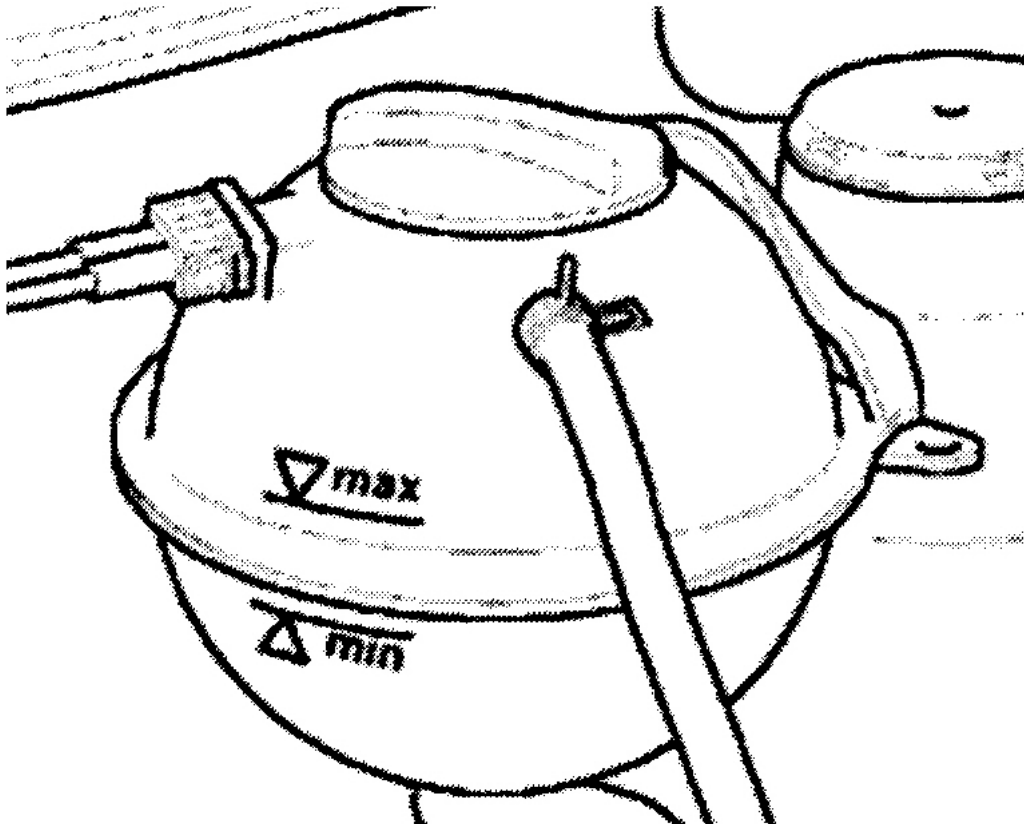

G00304536

Fig. 11: Identifying Expansion Tank Markings
Courtesy of VOLKSWAGEN UNITED STATES, INC.

6. On vehicles without expansion tank markings, close drain plug at radiator. Connect oil cooler hoses. Fill cooling system with recommended coolant mixture. See **COOLING SYSTEM SPECIFICATIONS** . Slowly fill expansion tank with coolant to upper hatch mark (arrow). See **Fig. 12** . Install expansion tank cap.

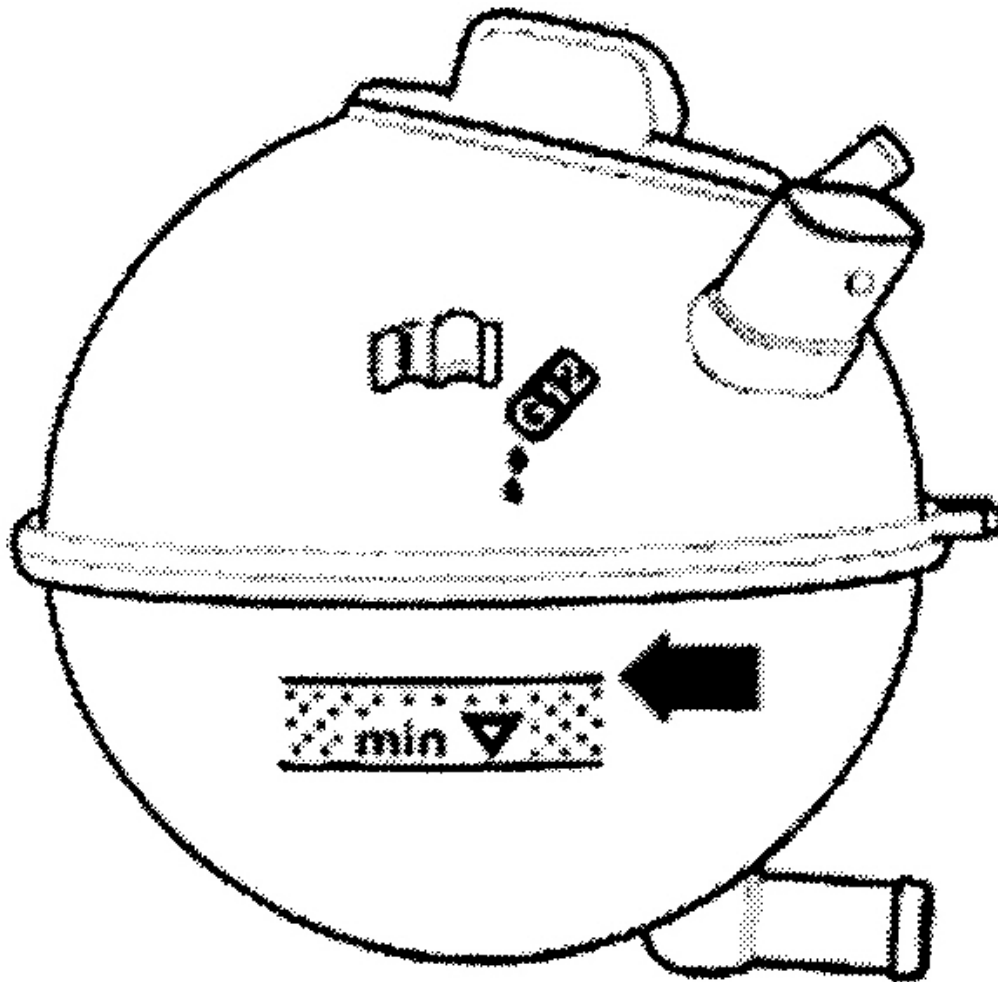

G00304551

Fig. 12: Identifying Expansion Tank Hatch Marks

Courtesy of VOLKSWAGEN UNITED STATES, INC.

7. Turn off A/C and heater controls. Start engine, and raise engine speed to 2000 RPM for approximately 3 minutes. Allow engine to idle, until coolant fan turns on. Turn ignition off.
8. Check coolant level, and top off as necessary. When engine is at normal operating temperature, coolant level must be at upper hatch mark, on expansion tank. See **Fig. 12** . When engine is cold, coolant level should be around middle of hatch mark, on expansion tank.
9. If VAS 6096 Charging Unit is available, close drain plug at radiator. Connect oil cooler hoses. Fill cooling system according to VAS 6096 Charging Unit instruction manual. Fill cooling system with

recommended coolant mixture. See **COOLING SYSTEM SPECIFICATIONS** .

SERVICING

WARNING: Cooling system is pressurized, when engine is at operating temperature. Wear gloves, and other appropriate protection. Slowly and carefully release system pressure, before performing any repairs.

Coolant does not usually need replacing. In case of larger repairs when coolant needs to be drained, new coolant must be used because, old has been exposed to oxidation and dirt. Flush cooling system when replacing coolant. To flush, fill system with clear water, and run engine for approximately 2 minutes. Drain cooling system. See **DRAINING, FILLING & BLEEDING** . Flushing system should remove most coolant residue.


Coolant to water ratio must not exceed 60%. Frost protection and cooling efficiency will decrease if the percentage of coolant is too high. For coolant to water ratio, see **COOLANT MIXTURE RECOMMENDATIONS** table under COOLING SYSTEM SPECIFICATIONS.

ADJUSTMENTS

If belt is to be reused, mark direction of rotation prior to removing drive belt. Serpentine belt is self-adjusting. For proper belt routing, see **DRIVE BELT ROUTING** .


DRIVE BELT ROUTING

NOTE: Serpentine belt is self-adjusting. See **Fig. 13** or **Fig. 14** .

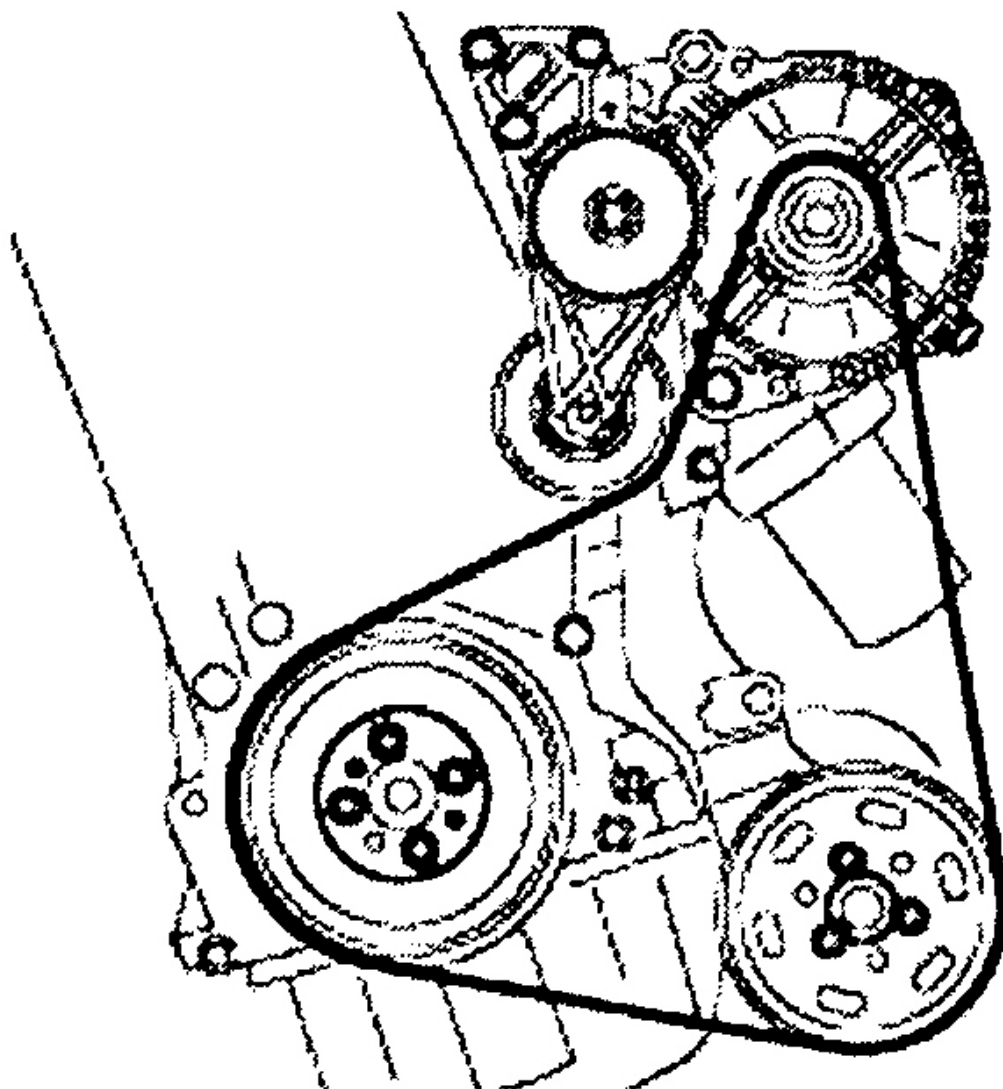

G00027339

Fig. 13: Drive Belt Routing (Without A/C)
Courtesy of VOLKSWAGEN UNITED STATES, INC.

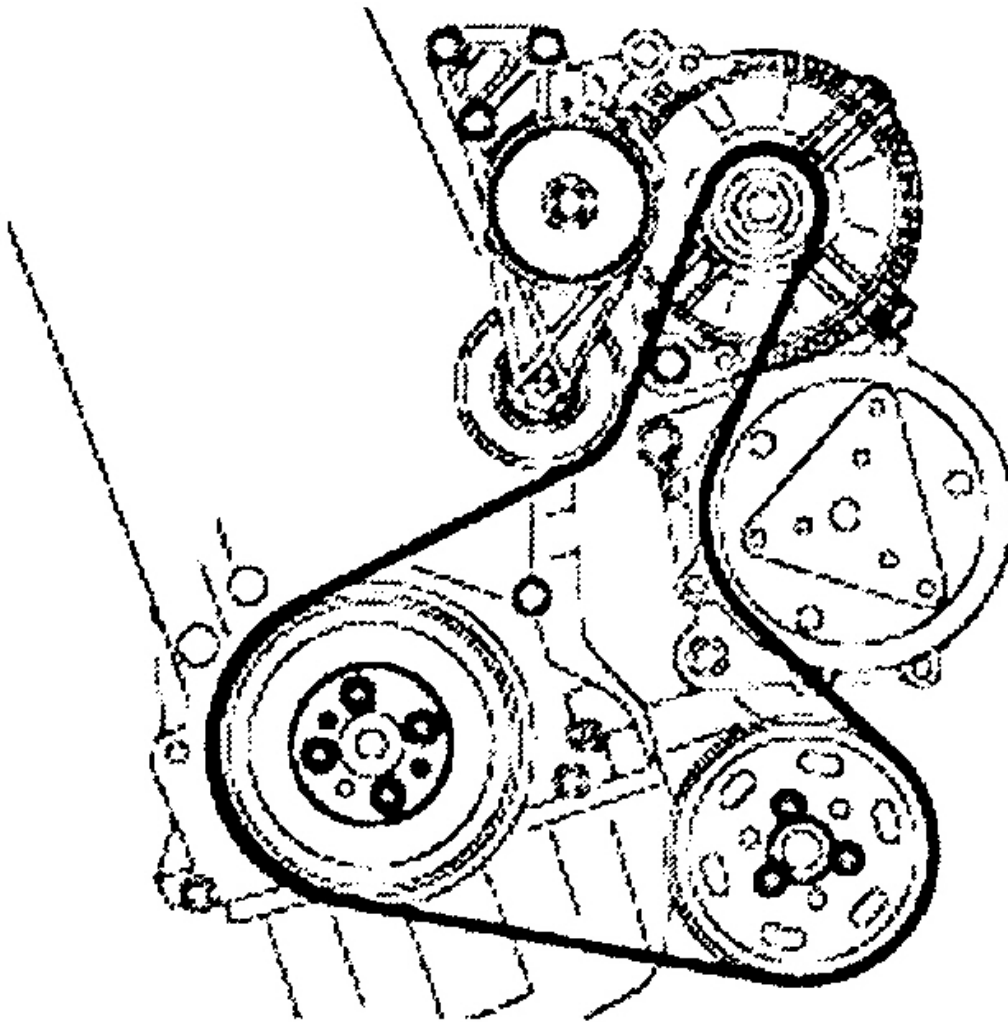


G00027340

Fig. 14: Drive Belt Routing (With A/C)

Courtesy of VOLKSWAGEN UNITED STATES, INC.

DRIVE BELT, REMOVING & INSTALLING

Remove engine cover. Rotate serpentine belt tensioner clockwise to relieve belt tension. Remove serpentine belt. See **Fig. 15** . Lock in place using Mandrel (T10060) or a drift.

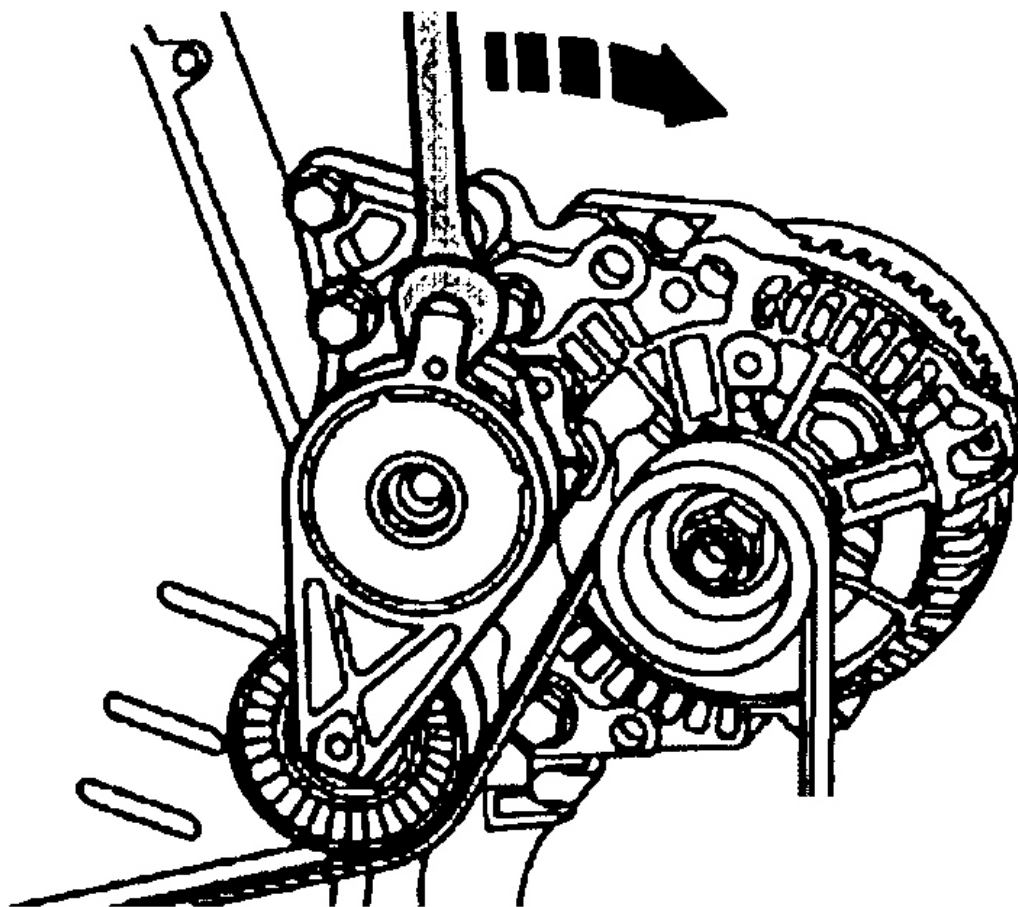

G00115618

Fig. 15: Releasing Serpentine Belt Tensioner
Courtesy of VOLKSWAGEN UNITED STATES, INC.

COOLING SYSTEM SPECIFICATIONS

COOLANT MIXTURE RECOMMENDATIONS

Application	Specification
Freeze Point	
Down To -13° F (- 25° C)	40% Coolant
Down To -31° F (- 35° C)	50% Coolant

COOLING SYSTEM SPECIFICATIONS

Application	Specification

Coolant Capacity	(1) 5.3 Qts. (5.0L)
Coolant Replacement Interval	(2)
Recommended Coolant	
Golf & Jetta ⁽³⁾ , ⁽⁵⁾	(4) Red G 012 A8 D
New Beetle	(5) Lilac (Purple) G 012 A8 F
Cooling Fan Thermal Switch	
First Stage	
On	198-207° F (92-97° C)
Off	183-196°F (84-91°C)
Second Stage	
On	210-221°F (99-105°C)
Off	196-208°F (91-98°C)
Thermostat	
Starts To Open	186°F (87°C)
Fully Open	216°F (102°C)
Opening Stroke	.28" (7 mm)
(1) Total coolant quantity may vary depending on vehicle equipment. (2) Manufacturer does not require routine coolant replacement. Replace coolant only if major repair is necessary. (3) On model year 2004 Golf and Jetta, engine code BEV, uses G12 coolant that is Lilac (Purple) in color. Refer to TSB Group 19 No. 02-01, dated Dec. 20, 2002. See <u>COOLANT (ANTIFREEZE), MIXING PRECAUTIONS</u>. (4) G12 coolant is Red in color. DO NOT mix Green and Red coolant. Mixing these coolant types will cause severe engine damage. (5) G12 coolant is Lilac (Purple) in color. DO NOT mix Green with Lilac coolant. Mixing these coolant types will cause severe engine damage.	